 
 


hansgrohe

S e r v i c e

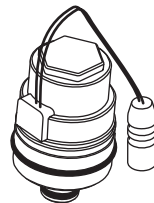

96904000 / 98854000

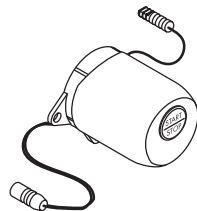


97139XX0

Starck (6V)

10100800 / 10105800

3 - 6


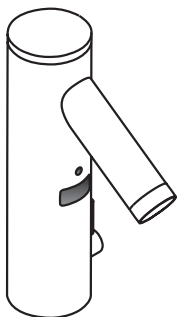


Electronic (6V)

105100XX0 / 15101XX0

31100000 / 31101000

7 - 9

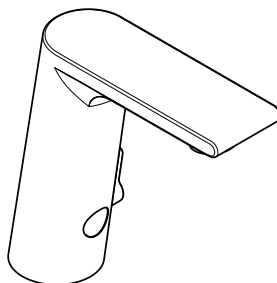
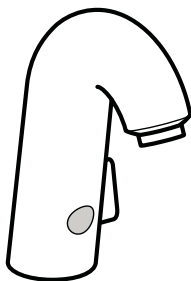


Electronic (9V)

15180XX0 / 15181XX0

31102000 / 31103000

10 - 12

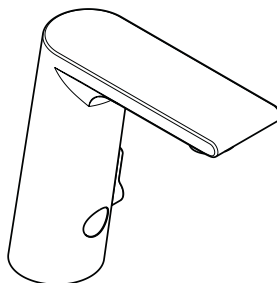
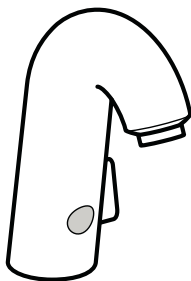


Brausethermostat UP mit elektronischer Start- / Stop-Taste (6 Volt)

Thermostatic Mixer with Electronic Start / Stop Button (6 Volt)







15740000 / 15740800







13 - 15





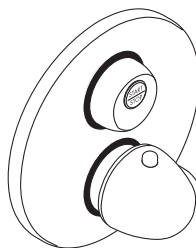
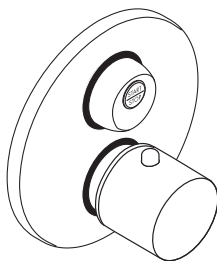







Starck (6V)

10100800 / 10105800

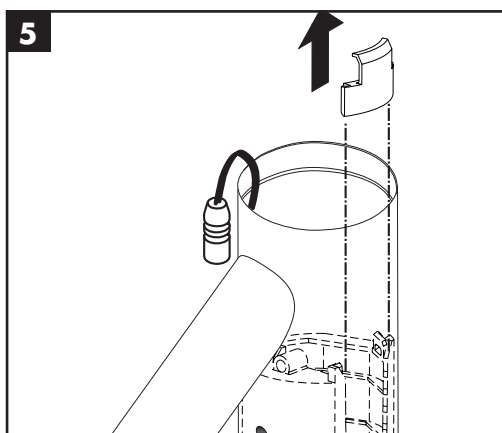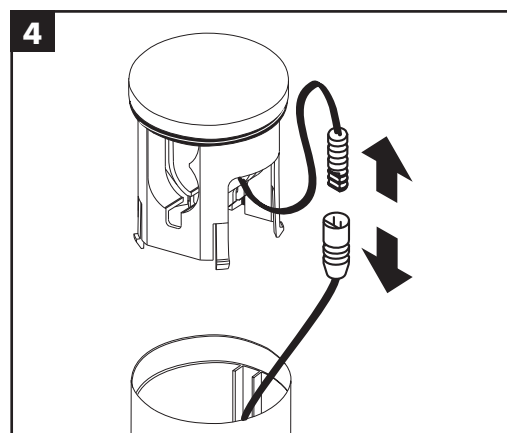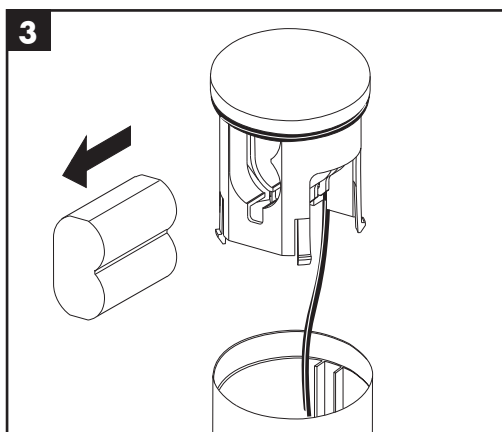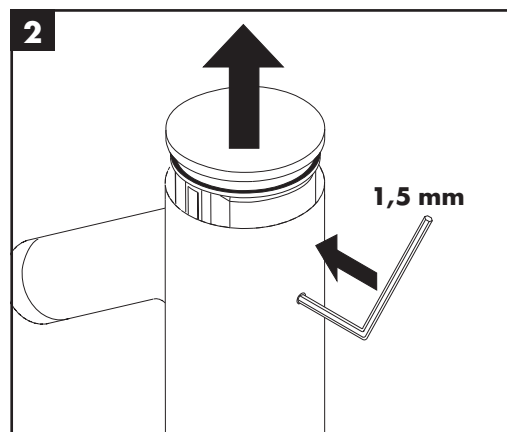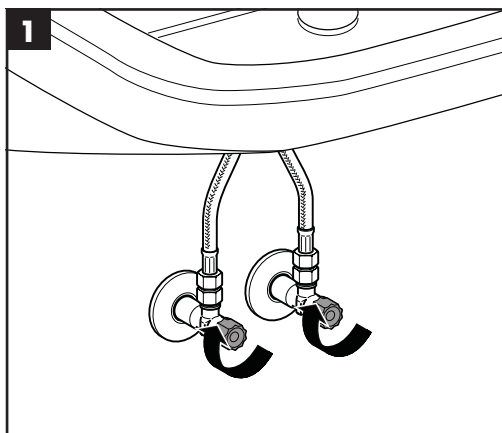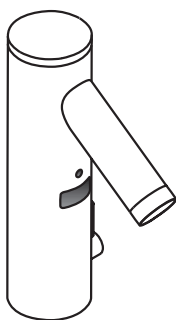

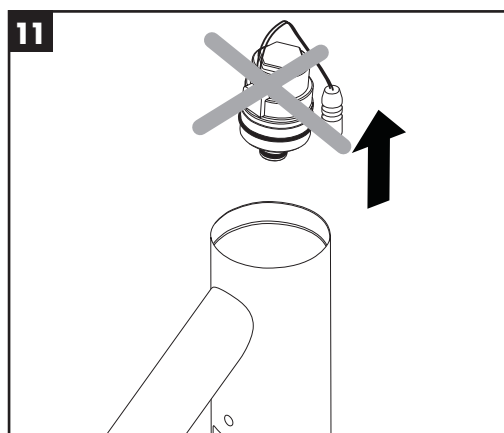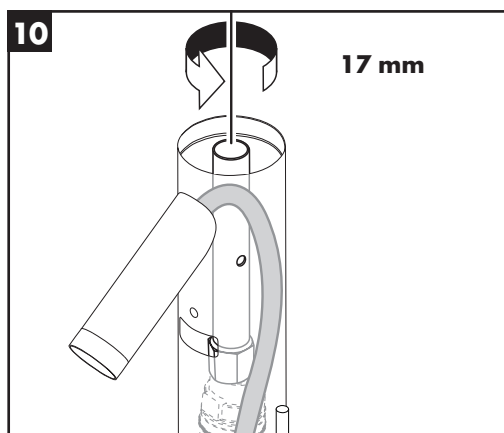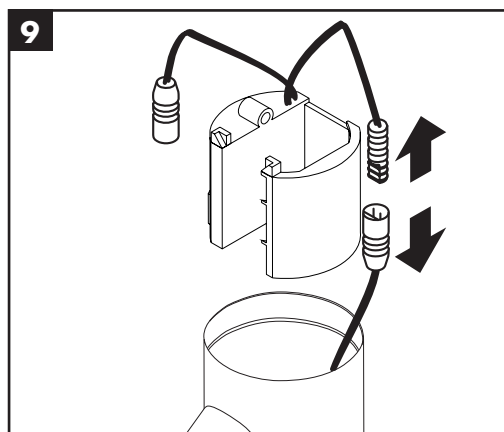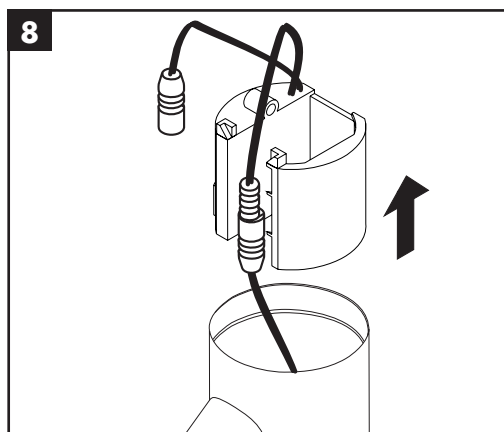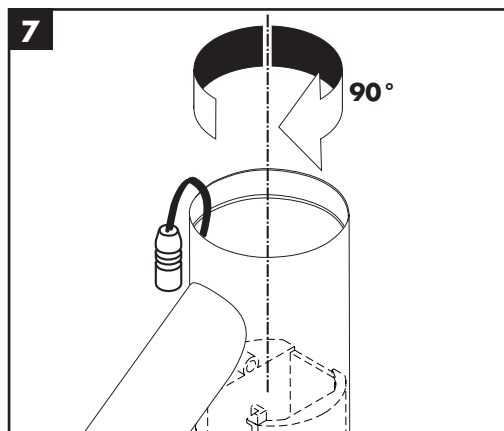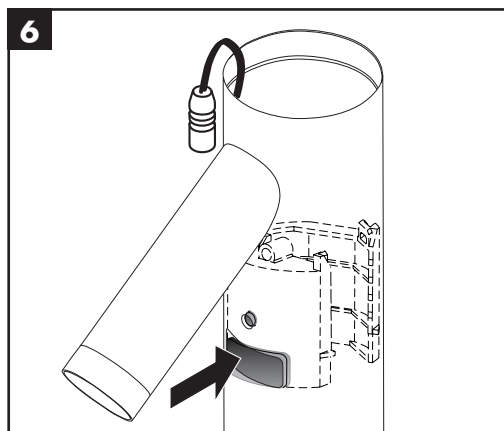

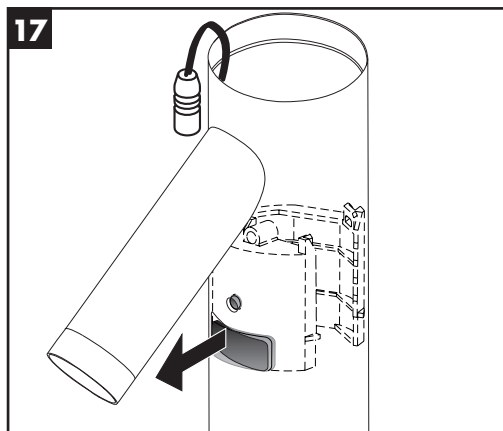
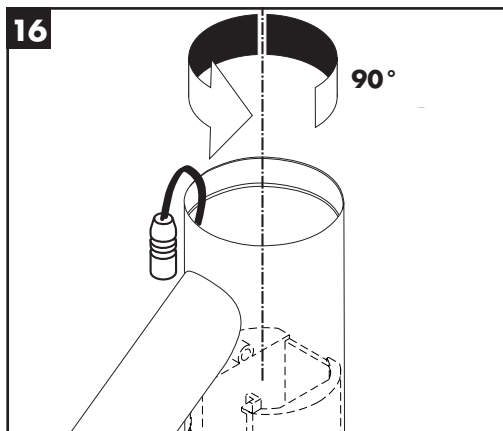
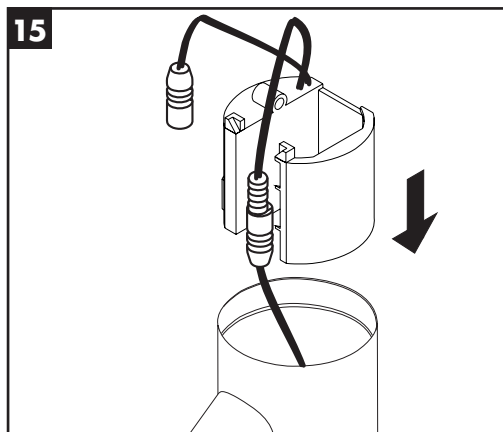
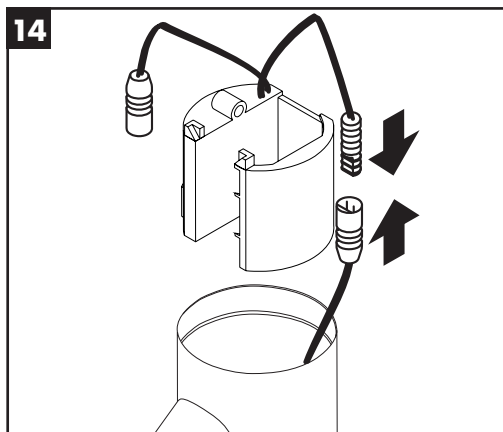
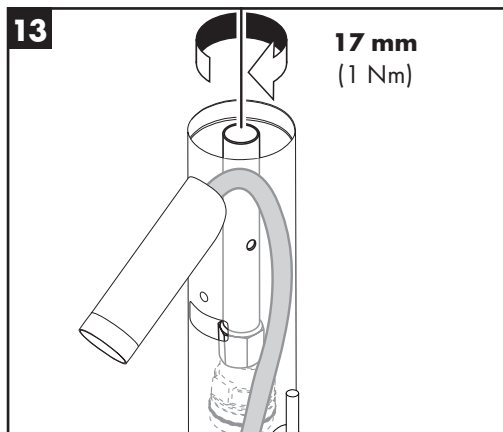
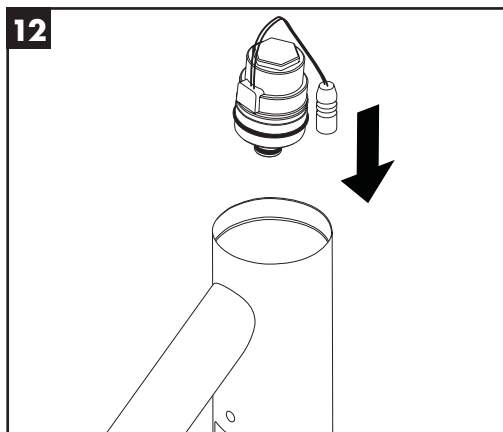



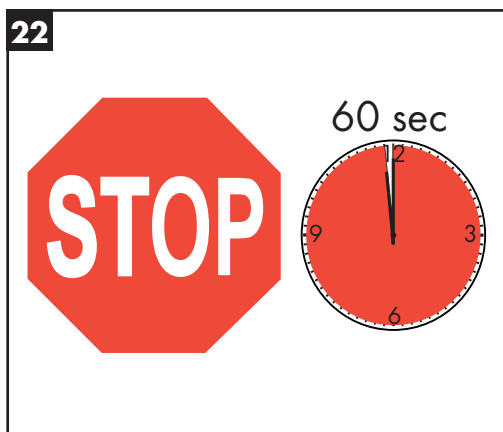
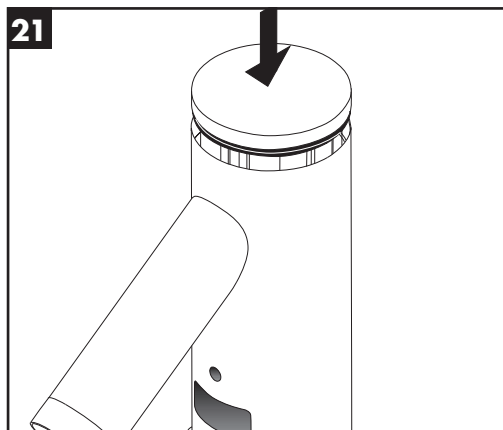
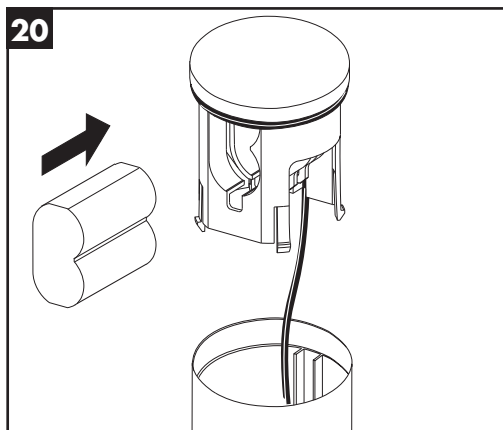
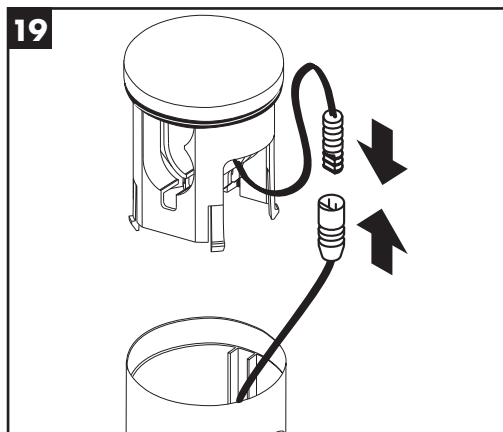
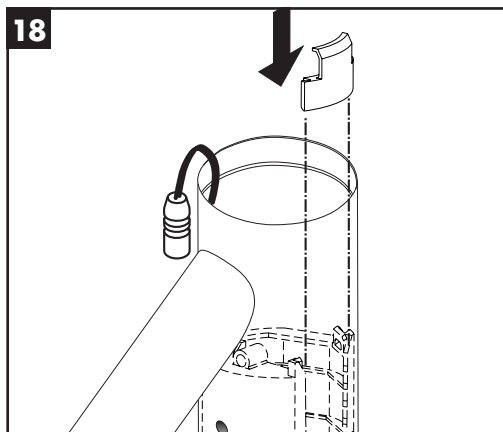






Electronic (6V)

105100XX0 / 15101XX0

31100000 / 31101000

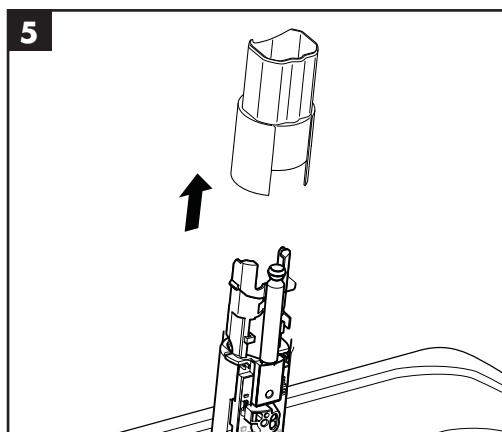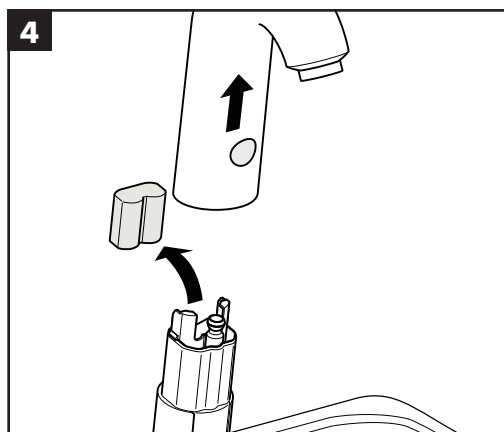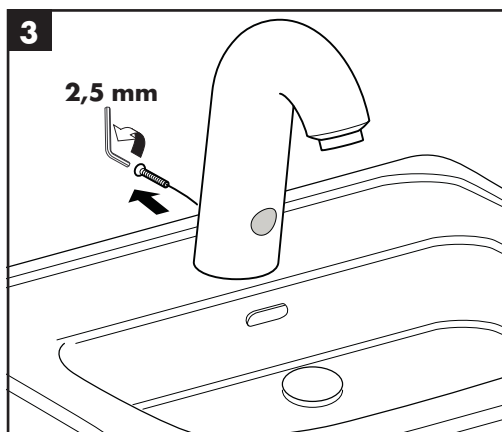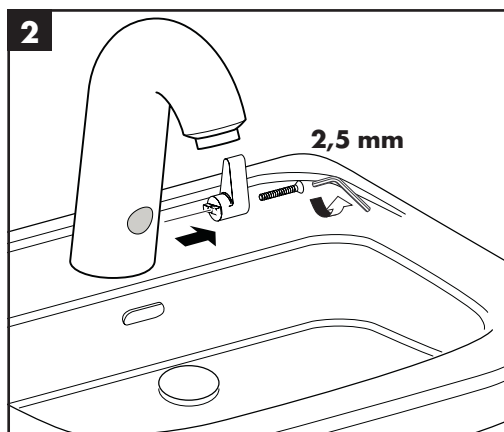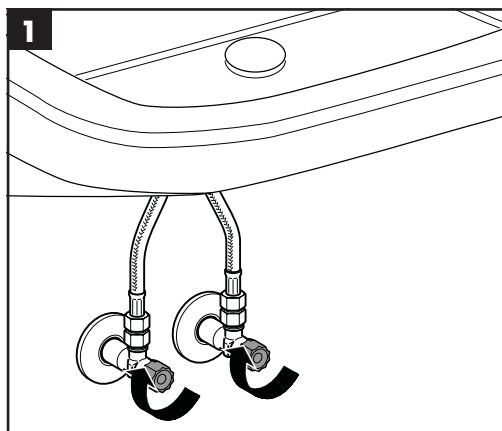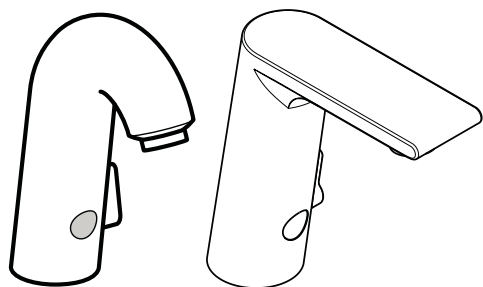

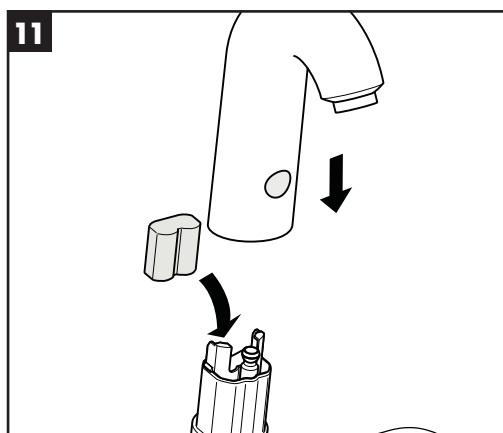
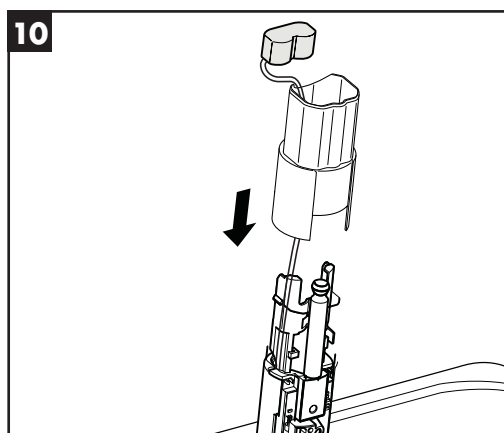
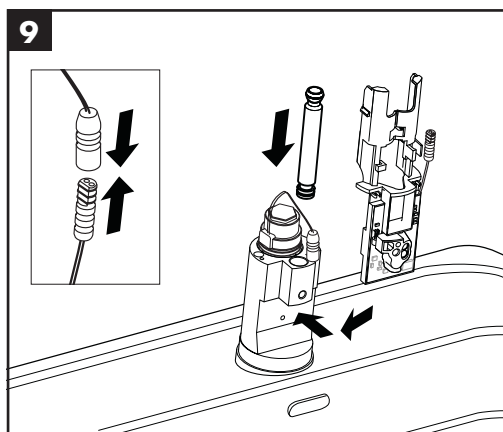
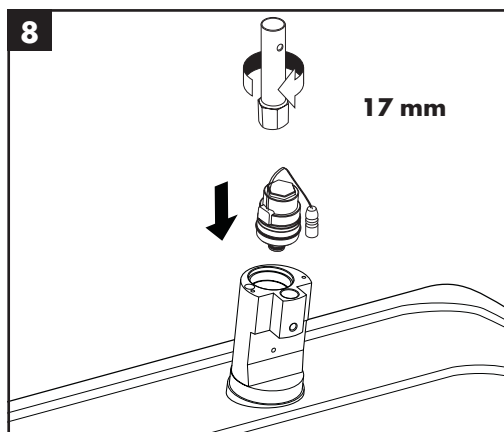
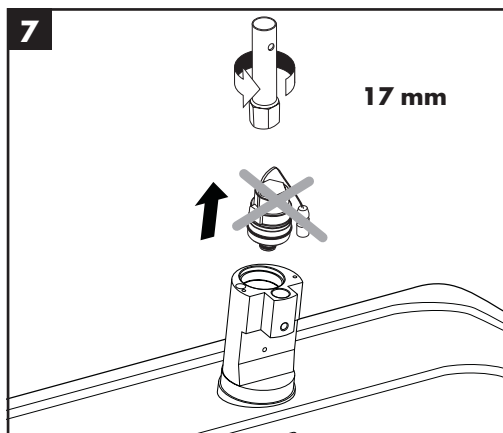
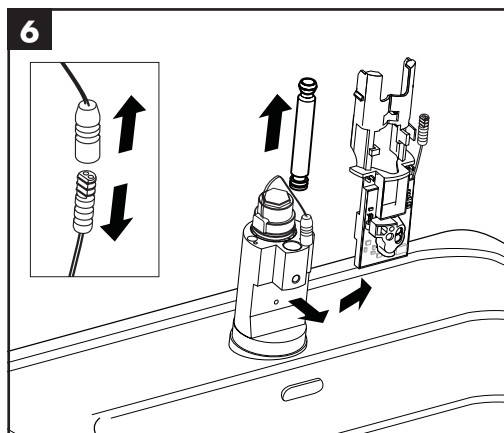




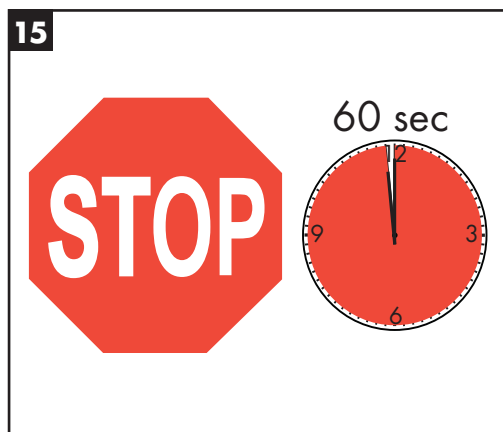
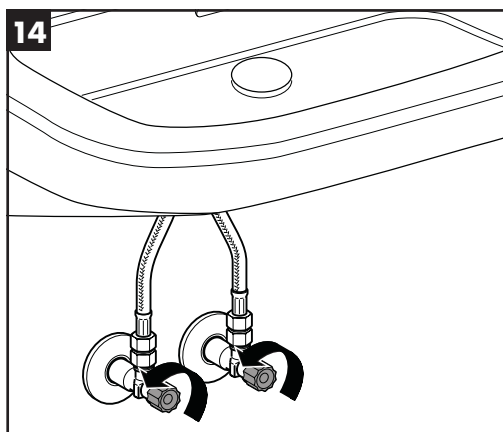
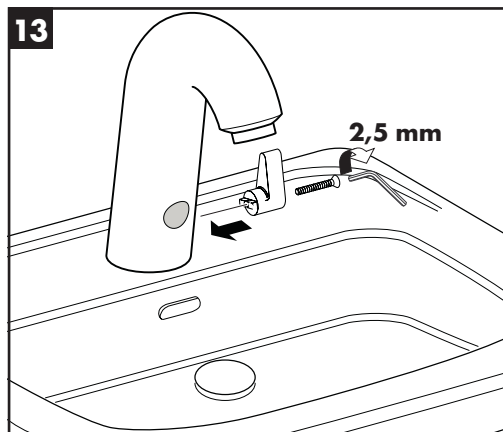
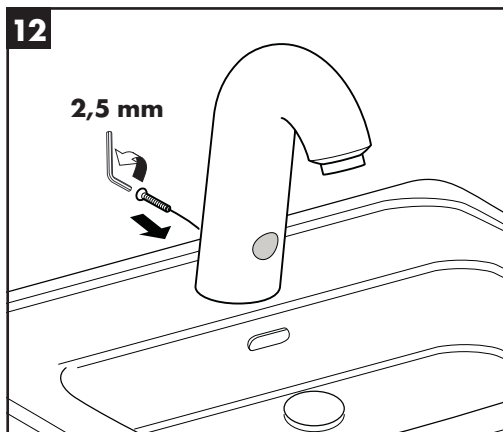






Electronic (9V)

15180XX0 / 15181XX0

31102000 / 31103000

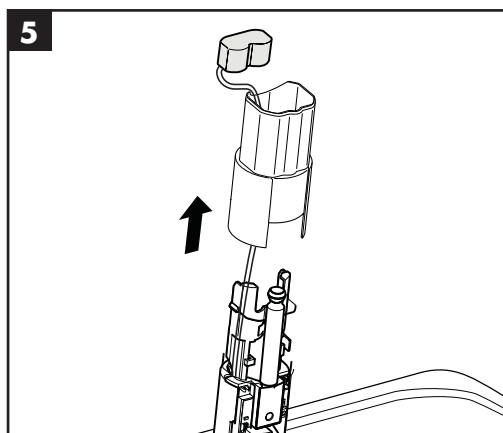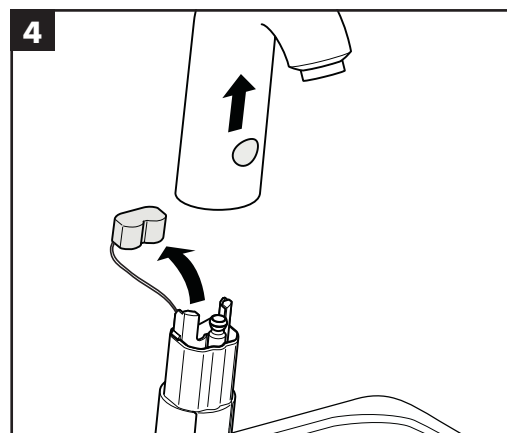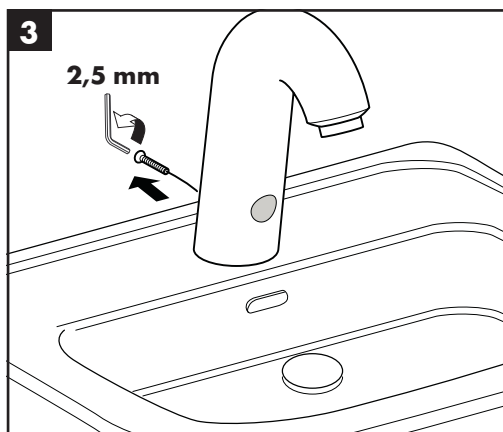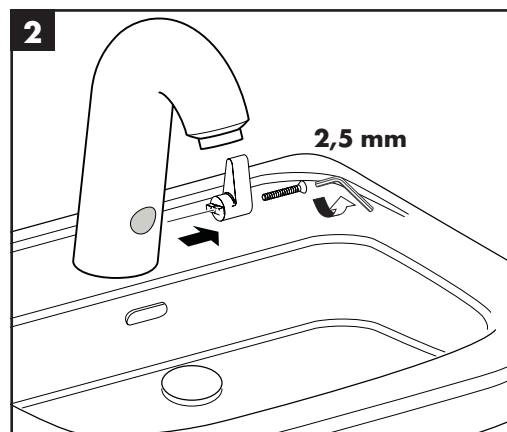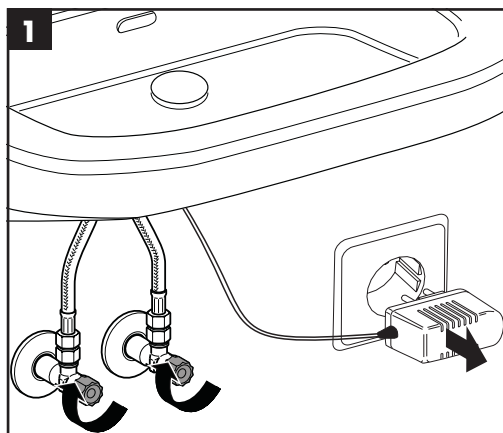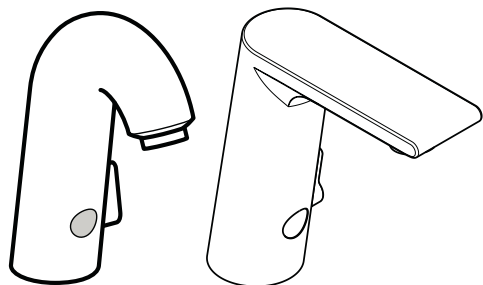

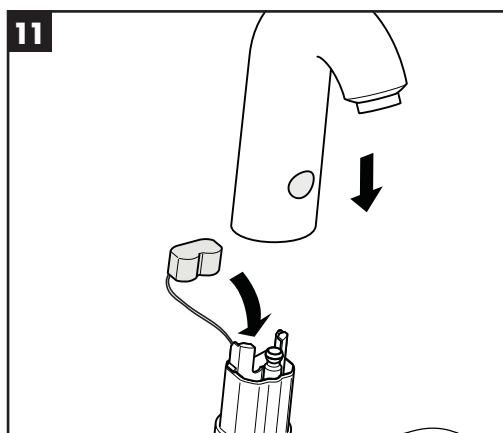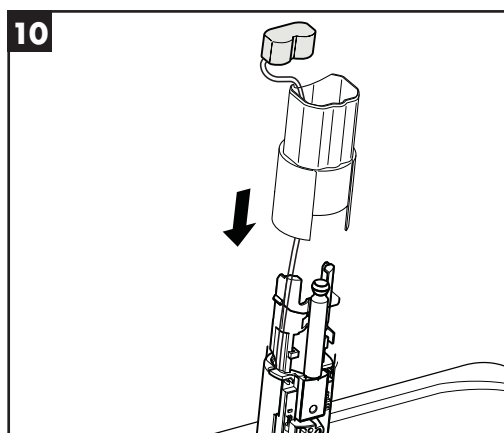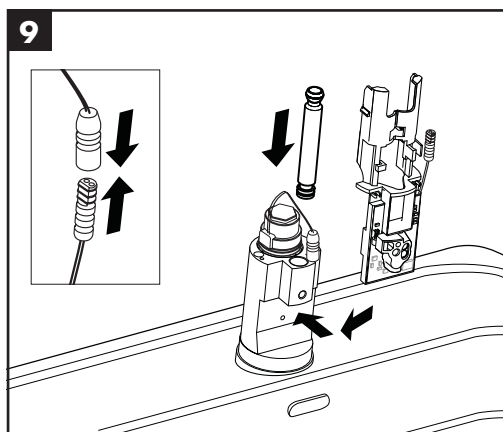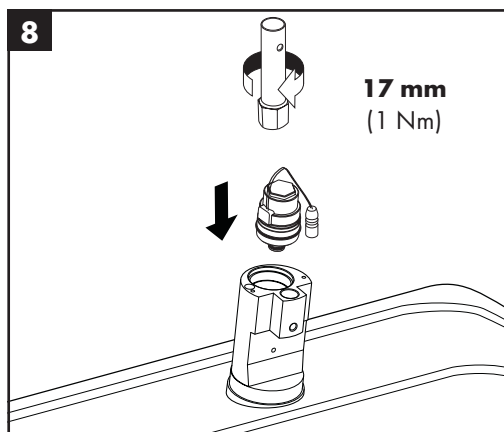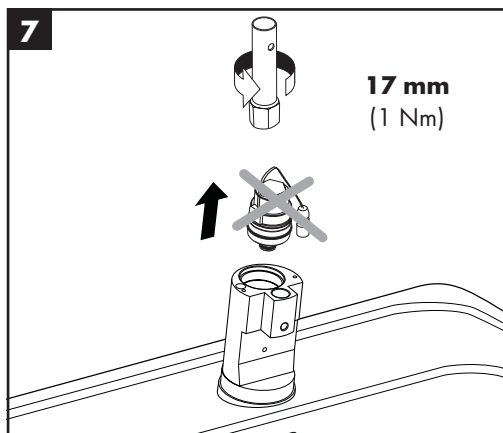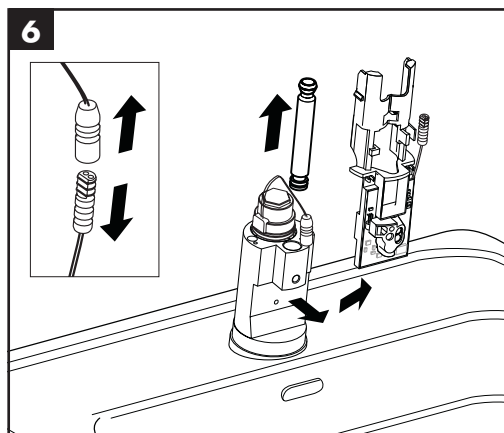



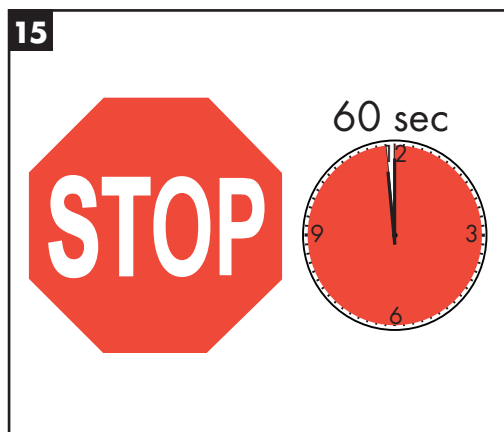
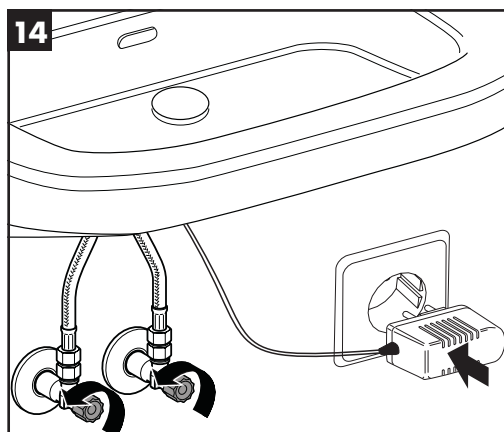
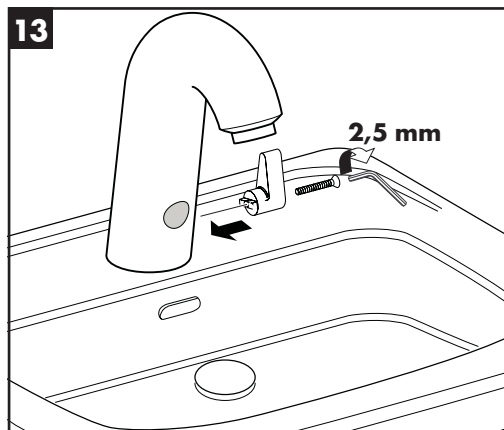
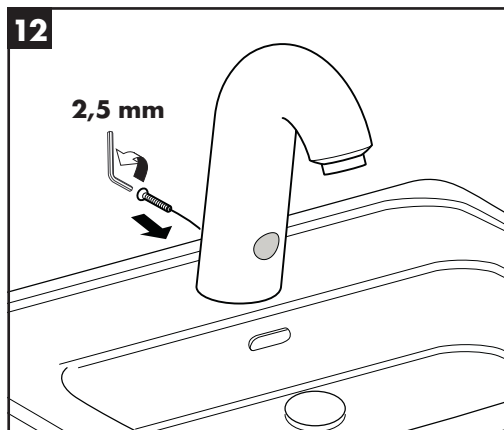




Brausethermostat UP mit elektronischer Start- / Stop-Taste (6 Volt)

Thermostatic Mixer with Electronic Start / Stop Button (6 Volt)



15740000 / 15740800

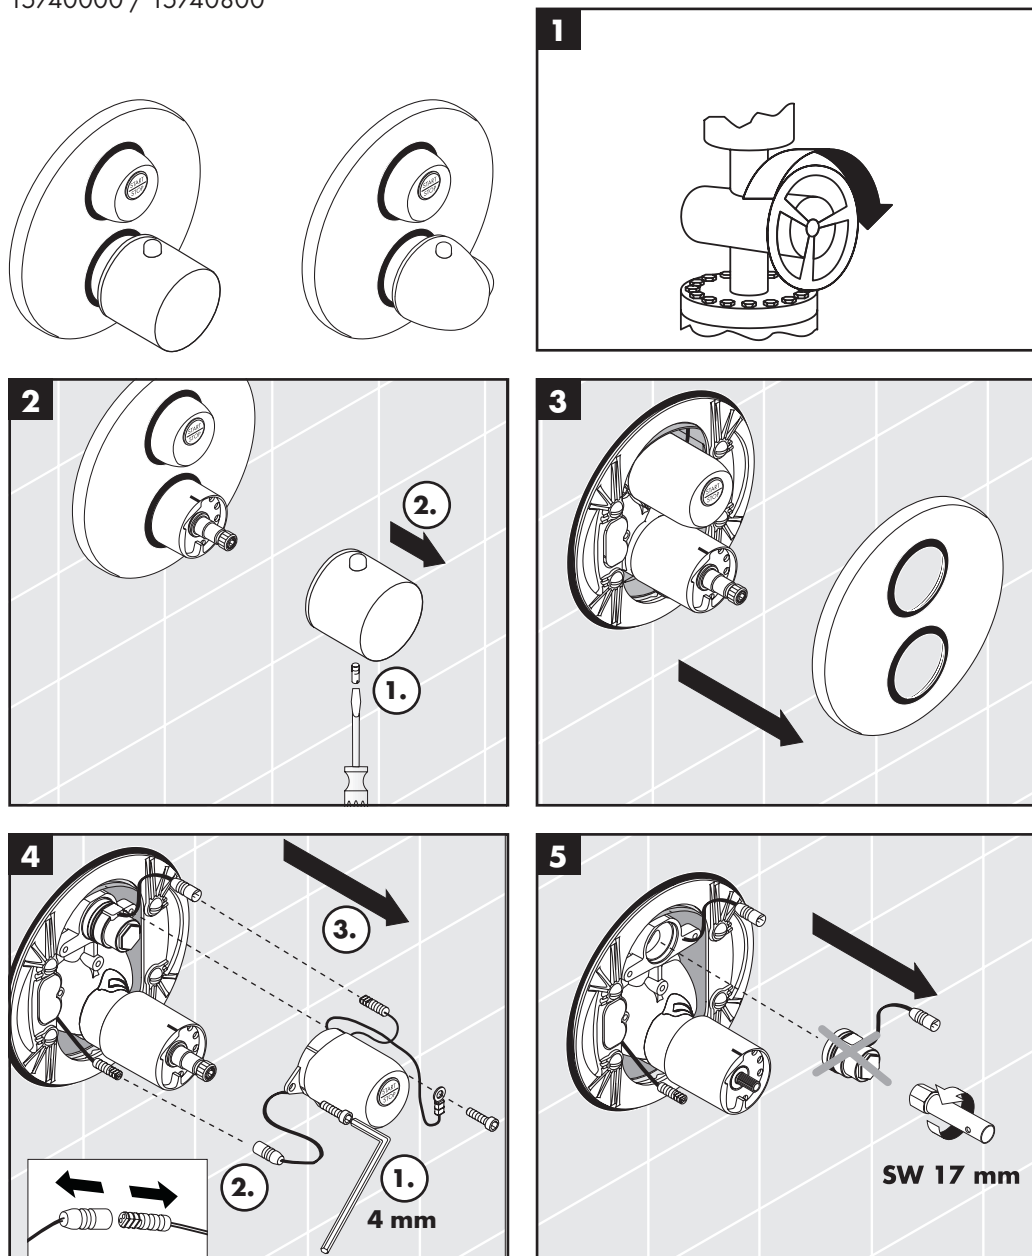

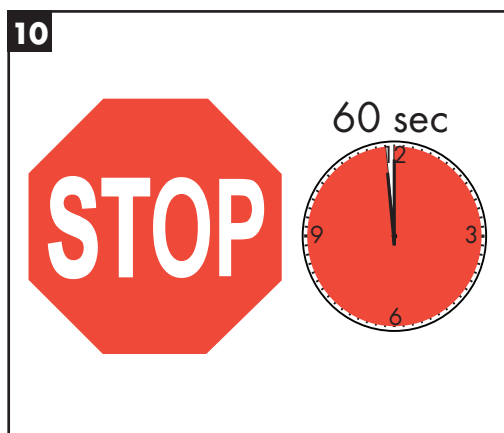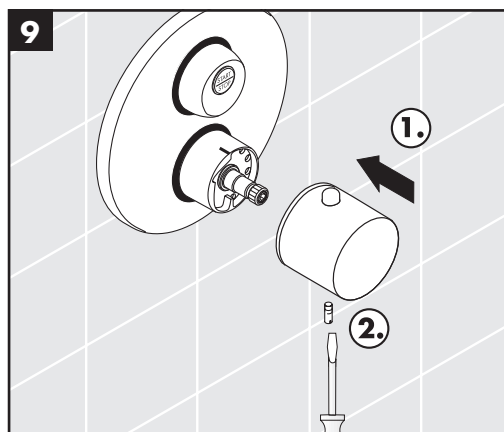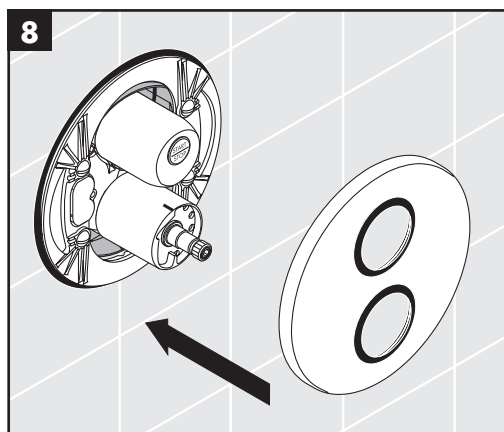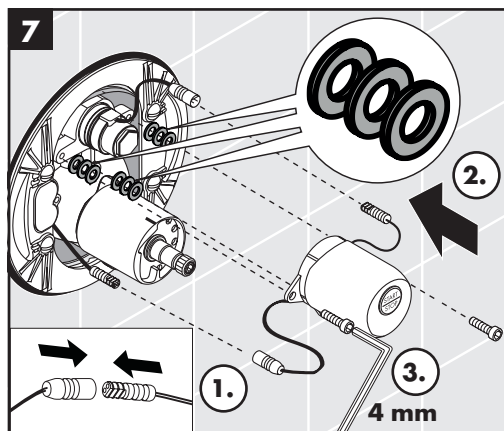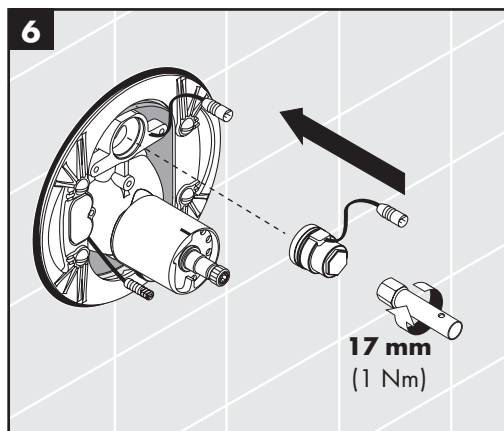

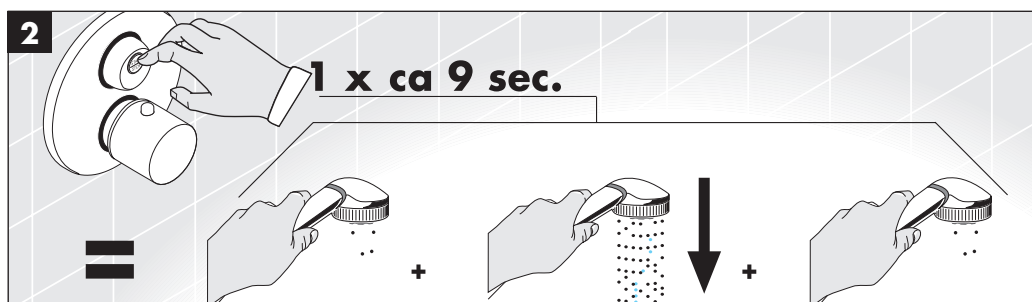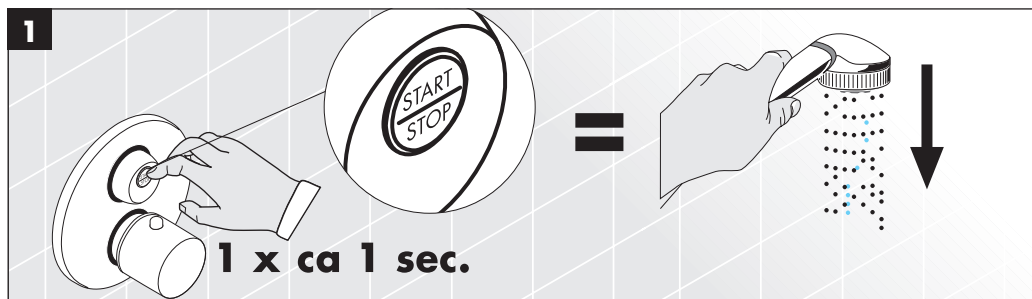


↓ **max. 3 sec.**

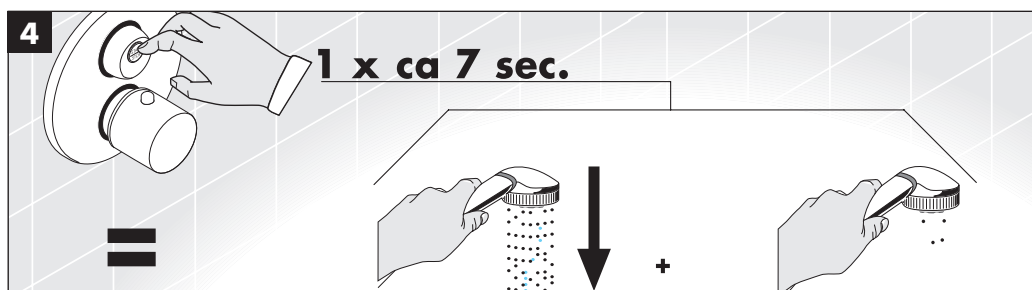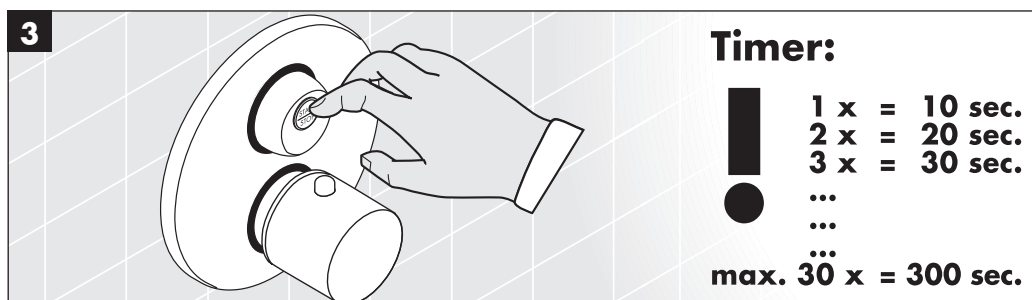




 Press start/stop button quickly to activate mixer.

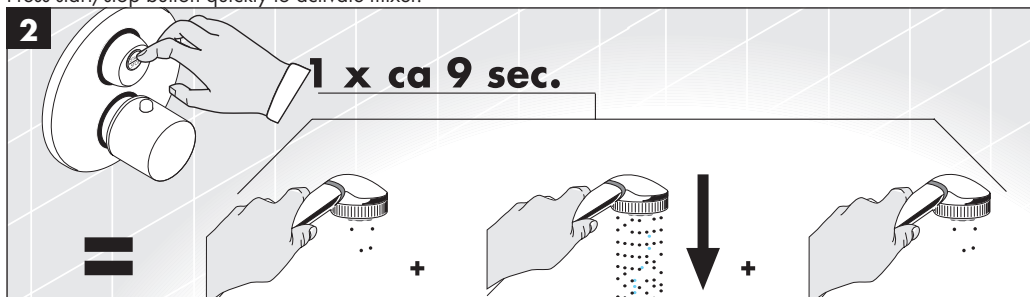


Start: Press start/stop button once again, hold until the mixer close by itself, it will start after a short period of time again and stop once again by itself. Then let of the button.

 ↓ **max. 3 sec.**

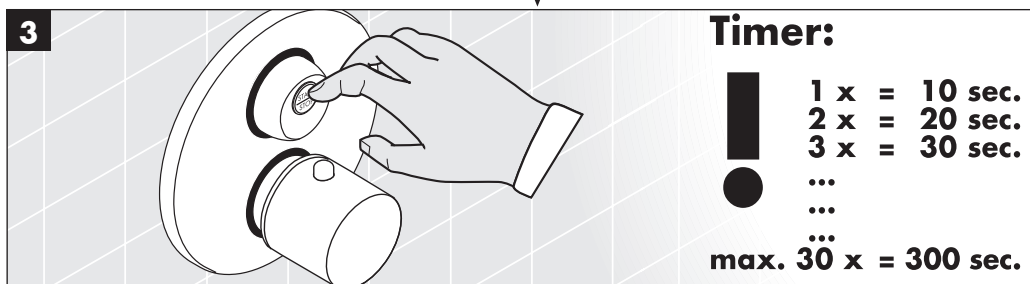

Programming: After max. 3 seconds, press the start/stop button several times to increase the shower time. One press is about 10 seconds.

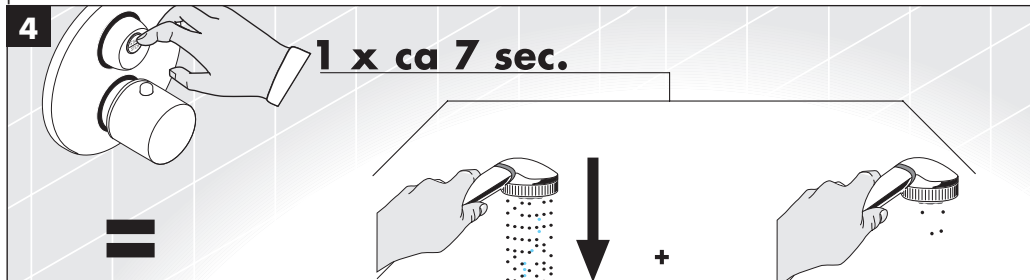

Quit adjustment: Press start/stop button until the mixer starts by itself and after a short period of time it will stop by itself. Then let of the button.

hansgrohe