

# RainBrain

Fehler	Ursache	Abhilfe
Fehlermeldung auf Touchscreen.		
		
00, 03	- Touchscreen defekt	- Touchscreen austauschen
01, 02, 12, 13, 14, 15, 19, 25, 26, 27	- Steuergerät defekt	- Steuergerät austauschen
04	- Stellmotor Temperatur defekt	- Stellmotor Temperatur austauschen
05	- Stellmotor Menge defekt	- Stellmotor Menge austauschen
06	- Spannungsunterbrechung Stellmotor Temperatur	- Kabelverbindung prüfen bzw. - Stellmotor Temperatur austauschen
07	- Spannungsunterbrechung Stellmotor Menge	- Kabelverbindung prüfen bzw. - Stellmotor Menge austauschen
08	- Drehmoment Stellmotor Temperatur zu hoch	- Kartusche austauschen bzw. - Stellmotor Temperatur austauschen
09	- Drehmoment Stellmotor Menge zu hoch	- Kartusche austauschen bzw. - Stellmotor Menge austauschen
10	- Kurzschluss am Stellmotor Temperatur	- Stellmotor Temperatur austauschen
11	- Kurzschluss am Stellmotor Menge	- Stellmotor Menge austauschen
16, 17, 18, 22	- Temperatursensor defekt	- Temperatursensor austauschen
20, 21	- Temperatursensor defekt	- Temperatursensor austauschen
	- Steuergerät defekt	- Steuergerät austauschen
24	- Netzteil defekt	- Netzteil austauschen
	- Steuergerät defekt	- Steuergerät austauschen
28	- Steuergerät defekt und /oder Stellmotor defekt	- Steuergerät austauschen - Stellmotor austauschen
30	- Spannungsaufnahme Lichtausgang zu hoch	- Lichtrelais überprüfen/ austauschen
	- Kabelbruch	- Kabel mit Stecker austauschen
	- Steuergerät defekt	- Steuergerät austauschen
31	- Niveausensor aktiviert → Wasser im Gehäuse	- Ursache für Undichtigkeit beseitigen, Wasser entfernen
	- Kabelbruch	- Niveausensor austauschen
	- Powerbox ist horizontal montiert	- Powerbox vertikal montieren

Fault	Cause	Remedy
Error message on touchscreen.		
		
00, 03	- Touchscreen defective	- Exchange touchscreen
01, 02, 12, 13, 14, 15, 19, 25, 26, 27	- Control system defective	- Exchange control system
04	- Servo motor for temperature defective	- Exchange servo motor for temperature
05	- Servo motor for volume defective	- Exchange servo motor for volume
06	- Voltage interruption servo motor for temperature	- Check cable connection, respectively - Exchange servo motor for temperature
07	- Voltage interruption servo motor for volume	- Check cable connection, respectively - Exchange servo motor for volume
08	- Torque of servo motor for temperature to high	- Exchange cartridge, respectively - Exchange servo motor for temperature
09	- Torque of servo motor for volume to high	- Exchange cartridge, respectively - Exchange servo motor for volume
10	- Short circuit at servo motor for temperature	- Exchange servo motor for temperature
11	- Short circuit at servo motor for volume	- Exchange servo motor for volume
16, 17, 18, 22	- Temperature sensor defective	- Exchange temperature sensor
20, 21	- Temperature sensor defective	- Exchange temperature sensor
	- Control system defective	- Exchange control system
24	- Transformer defective	- Exchange transformer
	- Control system defective	- Exchange control system
28	- Control system and /or servo motor defective	- Exchange control system - Exchange servo motor
30	- Power consumption at light output to high	- Exchange / check light relay
	- Cable break	- Exchange cable with plug
	- Control system defective	- Exchange control system
31	- Float switch is active → water in the housing	- Correct cause of leakage, remove water
	- Cable break	- Exchange float switch
	- Powerbox is mounted horizontally	- Install Powerbox vertically