



hansgrohe

Test de la ComfortZone

A chaque lavabo sa robinetterie adéquate.

hansgrohe Metris et Ideal Standard Moments








		500 x 375	650 x 515	900 x 515
		● # K 0718 xx	● # K 0717 xx	● # K 0715 xx
réf. art.	réf. art.			
Metris 100 	# 31088000	✓	✓	
Metris 110 	# 31080000 # 31121000	✓	✓	✓
Metris 200 	# 31183000		✓	✓
Metris 230 	# 31087000		✓	✓
Metris 260 	# 31082000		✓	

hansgrohe Metris et Ideal Standard SimplyU

réf. art.		réf. art.					
		● # T0997 xx	○ # T0127 xx	● # T0156 xx	○ # T0129 xx	⊗ # T0126 xx	
Metris 100 	# 31088000	✓	✓	✓	✓		
Metris 110 	# 31080000 # 31121000	✓	✓	✓	✓		
Metris 200 	# 31183000	✓	✓	✓	✓	✓ ^{a2}	
Metris 230 	# 31087000			✓	✓		
Metris 260 	# 31082000			✓	✓	✓ ^{a2}	
Metris 165 mm 	# 31085000				✓ ^{c1}	✓ ^{c1} _{d1}	
Metris 225 mm 	# 31086000				✓ ^{c1}	✓ ^{c1} _{d3}	

Légende:

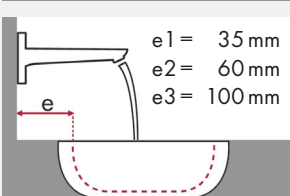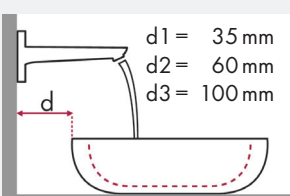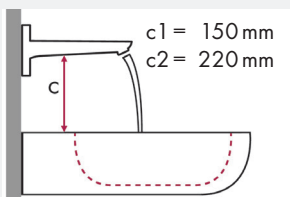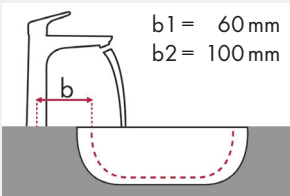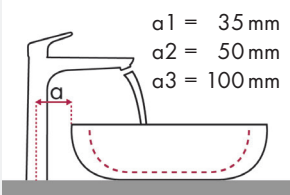

- ✓ = Combinaison recommandée
- = Trou percé
- = Trou prépercé
- ⊗ = Sans trou

hansgrohe Talis et Ideal Standard Moments








		500 x 375	650 x 515	900 x 515
		● # K 0718 xx	● # K 0717 xx	● # K 0715 xx
réf. art.	réf. art.			
Talis 80 	# 32040000 # 32057000	✓	✓	✓
Talis 80 	# 32053000		✓	✓
Talis 150 	# 32052000		✓	✓
Talis S² 	# 32070000 # 32073000		✓	✓
Talis 210 	# 32084000		✓	✓
Talis 250 	# 32055000			✓

hansgrohe Talis et Ideal Standard SimplyU

réf. art.		réf. art.					
		● # T0997 xx	○ # T0127 xx	● # T0156 xx	○ # T0129 xx	⊗ # T0126 xx	
Talis 80 	# 32040000 # 32057000	✓	✓	✓	✓		
Talis 80 	# 32053000	✓	✓	✓	✓		
Talis 150 	# 32052000	✓	✓	✓	✓		
Talis S² 	# 32070000 # 32073000			✓	✓		
Talis 210 	# 32084000			✓	✓		
Talis 165 mm 	# 31618000				✓ ^{c1}	✓ ^{c1} _{d1}	
Talis 225 mm 	# 31611000				✓ ^{c1}	✓ ^{c1} _{d3}	

Légende:

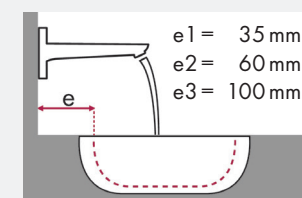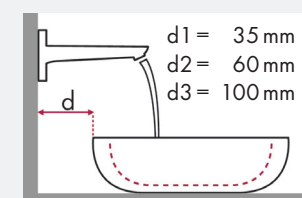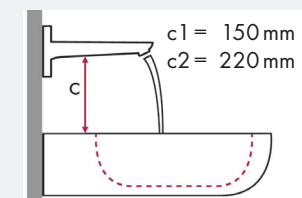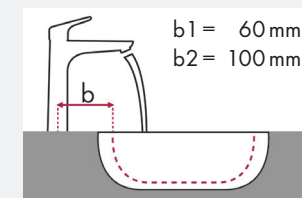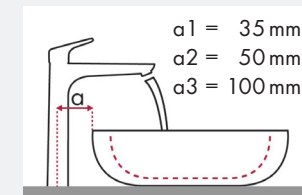

✓ = Combinaison recommandée

● = Trou percé

○ = Trou prépercé

⊗ = Sans trou

hansgrohe Focus et Ideal Standard Moments








		500 x 375	650 x 515	900 x 515
		● # K 0718 xx	● # K 0717 xx	● # K 0715 xx
réf. art.	réf. art.			
Focus 70 	# 31730000 # 31132000 # 31130000	✓		
Focus 100 	# 31607000 # 31621000	✓	✓	✓
Focus 190 	# 31608000		✓	✓
Focus 240 	# 31609000		✓	✓

hansgrohe Focus et Ideal Standard SimplyU

réf. art.		réf. art.			réf. art.		
							
		500 x 500		500 x 650		550 x 350	
		● # T0997 xx	○ # T0127 xx	● # T0156 xx	○ # T0129 xx	⊗ # T0126 xx	
Focus 70 	# 31730000	✓	✓	✓	✓		
Focus 100 	# 31607000 # 31621000	✓	✓	✓	✓		
Focus 190 	# 31608000	✓	✓	✓	✓	✓ ^{a2}	

Légende:

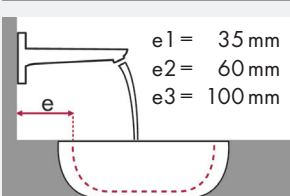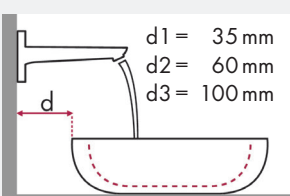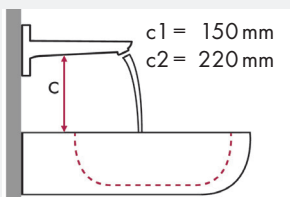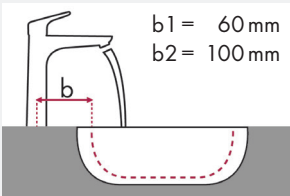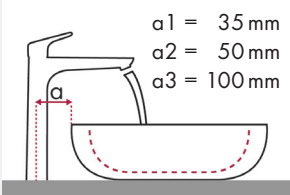

- ✓ = Combinaison recommandée
- = Trou percé
- = Trou prépercé
- ⊗ = Sans trou

hansgrohe PuraVida et Ideal Standard Moments








réf. art.		500 x 375	650 x 515	900 x 515
		● # K 0718 xx	● # K 0717 xx	● # K 0715 xx
PuraVida 110 	#15074000 #15074400	✓	✓	✓

hansgrohe PuraVida et Ideal Standard SimplyU

réf. art.		500 x 500	500 x 650	550 x 350
		● # T0997 xx	● # T0156 xx ○ # T0129 xx	⊗ # T0126 xx
PuraVida 110 	#15074000 #15074400	✓	✓	
PuraVida 200 	#15081000 #15081400			✓ ^{a2}
PuraVida 240 	#15072000 #15072400 #15066000 #15066400			✓ ^{a2}
PuraVida 165 mm 	#15084000 #15084400		✓ ^{c1}	✓ ^{c1} _{d1}
PuraVida 225 mm 	#15085000 #15085400		✓ ^{c1}	✓ ^{c1} _{d3}

Légende:

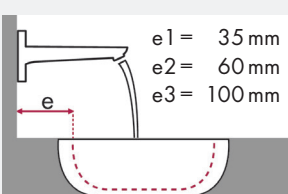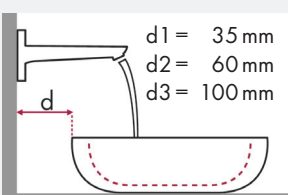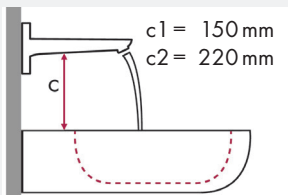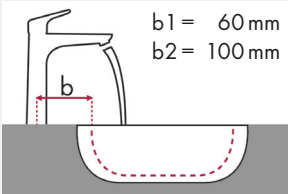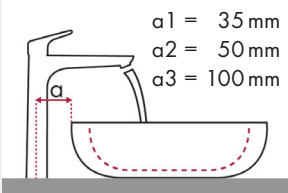






- ✓ = Combinaison recommandée
- = Trou percé
- = Trou prépercé
- ⊗ = Sans trou

hansgrohe Metris Classic et Ideal Standard SimplyU



réf. art.		réf. art.			
		500 x 500	500 x 650		550 x 350
		● #T0997 xx	● #T0156 xx	○ #T0129 xx	⊗ #T0126 xx
Metris Classic 100 	#31075000	✓	✓		
Metris Classic 165 mm 	#31000000			✓ ^{c1}	✓ ^{c1} _{d1}
Metris Classic 225 mm 	#31003000			✓ ^{c1}	✓ ^{c1} _{d3}

Légende:

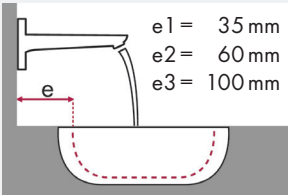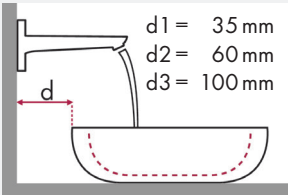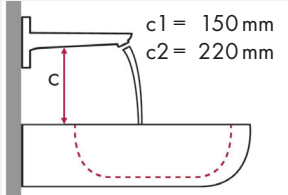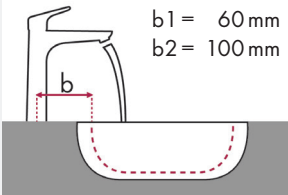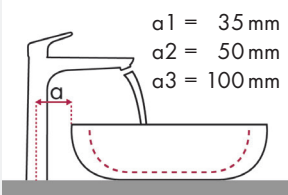

- ✓ = Combinaison recommandée
- = Trou percé
- = Trou prépercé
- ⊗ = Sans trou