

hansgrohe

ComfortZone test

The right mixer for every washbasin.








hangrohe Metris and Roca washbasin



		Java 560 x 475	Selene 510 x 395	Meridian 850 x 460	Diverta 470 x 440	Diverta 750 x 440	Ibis 440 x 310	Victoria 560 x 460	Victoria 650 x 510	The Gap 600 x 470	The Gap 650 x 470
		●	⊗	●	●	●	○	●	●	●	●
		# 7327863000	# 7322307000	# 32724D0000	# 73271110	# 3271100000	# 3208410010	# 3253930000	# 3253910000	# 3274740000	# 3274730000
article no.	article no.										
Metris 100	# 31088000	✓					✓	✓			
	# 31186000	✓					✓	✓			
	# 31166000	✓					✓	✓			
Metris 110	# 31080000	✓	✓ ^{a2}	✓	✓	✓	✓	✓	✓	✓	✓
	# 31074000	✓	✓ ^{a2}	✓	✓	✓	✓	✓	✓	✓	✓
	# 31121000	✓	✓ ^{a2}	✓	✓	✓	✓	✓	✓	✓	✓
Metris 200	# 31084000	✓	✓ ^{a2}	✓	✓	✓	✓	✓	✓	✓	✓
	# 31183000	✓	✓ ^{a2}	✓	✓	✓	✓	✓	✓	✓	✓
Metris 230	# 31185000	✓	✓ ^{a2}	✓	✓	✓	✓	✓	✓	✓	✓
	# 31087000	✓	✓ ^{a2}	✓				✓	✓	✓	✓
Metris 260	# 31187000	✓	✓ ^{a2}	✓				✓	✓	✓	✓
	# 31081000	✓	✓ ^{a2}	✓				✓	✓	✓	✓
Metris 165 mm	# 31082000		✓ ^{a2}					✓	✓		
	# 31184000		✓ ^{a2}					✓	✓		
Metris 225 mm	# 31085000		✓ ^{c1} d2				✓ ^{c1}				
	# 31086000		✓ ^{c1} d2								

Legend:

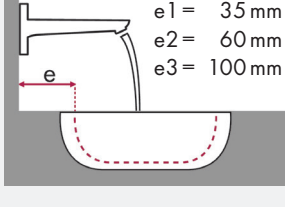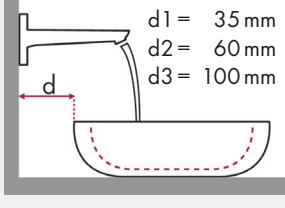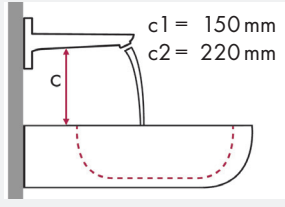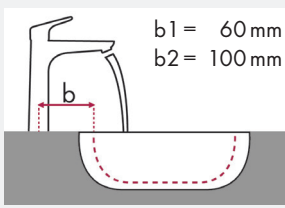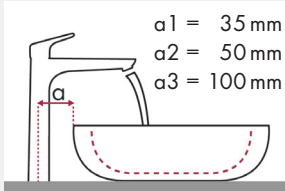






- ✓ = Recommended combination
- = Taphole pushed through
- = Prepared taphole
- ⊗ = Without taphole

hangrohe Talis and Roca washbasin



		Java 560 x 475	Selene 510 x 395	Meridian 850 x 460	Diverta 470 x 440	Diverta 750 x 440	Ibis 440 x 310	Victoria 560 x 460	Victoria 650 x 510	The Gap 600 x 470	The Gap 650 x 470
		●	⊗	●	●	●	○	●	●	●	●
		# 7327863000	# 7322307000	# 32724D0000	# 73271110	# 3271100000	# 3208410010	# 3253930000	# 3253910000	# 3274740000	# 3274730000
article no.	article no.										
Talis 80 	# 32040000	✓		✓	✓	✓	✓	✓	✓	✓	✓
	# 32042000 # 32057000										
Talis 80 	# 32041000 # 32130000	✓		✓	✓	✓	✓	✓	✓	✓	✓
	# 32053000	✓						✓	✓		
Talis 150 	# 32052000		✓ ^{a2}								
Talis S 	# 32070000 # 32073000	✓	✓ ^{a2}	✓		✓		✓	✓	✓	✓
	Talis 210 	# 32084000	✓	✓ ^{a2}	✓			✓	✓	✓	✓
# 32082000 # 32080000			✓ ^{a2}	✓			✓	✓	✓	✓	✓
Talis 250 	# 32055000		✓ ^{a2}								
Talis 165mm 	# 31086000		✓ ^{c1} ✓ ^{d2}				✓ ^{c1}				
Talis 225mm 	# 31611000		✓ ^{c1} ✓ ^{d2}								

Legend:

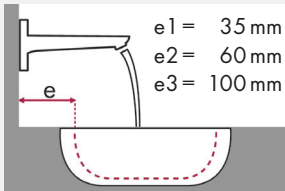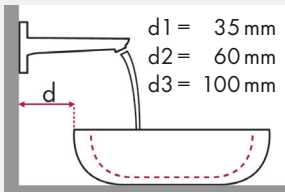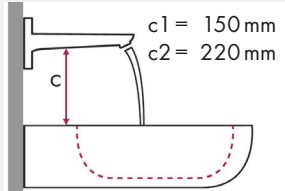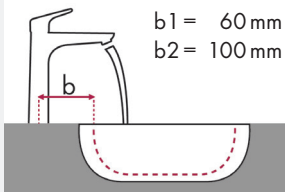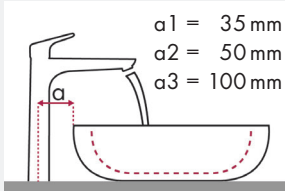






- ✓ = Recommended combination
- = Taphole pushed through
- = Prepared taphole
- ⊗ = Without taphole

hansgrohe Focus and Roca washbasin



		Java 560 x 475	Selene 510 x 395	Meridian 850 x 460	Diverta 470 x 440	Diverta 750 x 440	Ibis 440 x 310	Victoria 560 x 460	Victoria 650 x 510	The Gap 600 x 470	The Gap 650 x 470
		●	⊗	●	●	●	○	●	●	●	●
		# 7327863000	# 7322307000	# 32724D0000	# 73271110	# 3271100000	# 3208410010	# 3253930000	# 3253910000	# 3274740000	# 3274730000
article no.											
Focus 70 	# 31730000										
	# 31132000 # 31130000	✓					✓	✓			
Focus 100 	# 31733000 # 31604000	✓					✓	✓			
	# 31607000 # 31621000	✓	✓ ^{a2}	✓	✓	✓	✓	✓	✓	✓	✓
Focus 190 	# 31517000	✓	✓ ^{a2}	✓	✓	✓	✓	✓	✓	✓	✓
	# 31608000	✓	✓ ^{a2}	✓	✓		✓	✓	✓	✓	✓
Focus 240 	# 31518000	✓	✓ ^{a2}	✓	✓		✓	✓	✓	✓	✓
	# 31609000	✓	✓ ^{a2}	✓				✓	✓	✓	✓
	# 31519000	✓	✓ ^{a2}	✓				✓	✓	✓	✓

Legend:

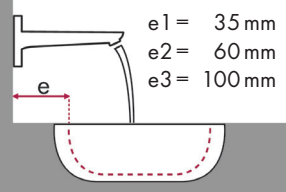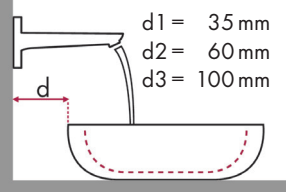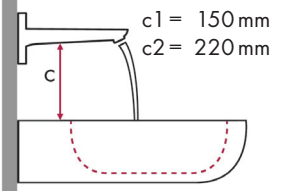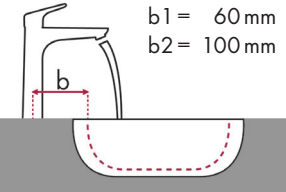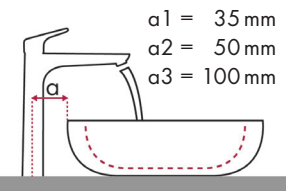






- ✓ = Recommended combination
- = Taphole pushed through
- = Prepared taphole
- ⊗ = Without taphole

hangrohe PuraVida and Roca washbasin



		Java 560 x 475	Selene 510 x 395	Meridian 850 x 460	Diverta 470 x 440	Diverta 750 x 440	Ibis 440 x 310	Victoria 560 x 460	Victoria 650 x 510	The Gap 600 x 470	The Gap 650 x 470
		●	⊗	●	●	●	○	●	●	●	●
		# 7327863000	# 7322307000	# 32724D0000	# 73271110	# 3271100000	# 3208410010	# 3253930000	# 3253910000	# 3274740000	# 3274730000
article no.	article no.										
PuraVida 100 	# 15075000	✓		✓	✓	✓	✓	✓	✓	✓	✓
	# 15075400	✓		✓	✓	✓	✓	✓	✓	✓	✓
PuraVida 110 	# 15132000	✓		✓	✓	✓	✓	✓	✓	✓	✓
	# 15132400	✓		✓	✓	✓	✓	✓	✓	✓	✓
PuraVida 110 	# 15070000	✓		✓	✓	✓	✓	✓	✓	✓	✓
	# 15070400	✓		✓	✓	✓	✓	✓	✓	✓	✓
PuraVida 200 	# 15074000	✓		✓	✓	✓	✓	✓	✓	✓	✓
	# 15074400	✓		✓	✓	✓	✓	✓	✓	✓	✓
PuraVida 200 	# 15081000	✓	✓ ^{a2}	✓				✓	✓	✓	✓
	# 15081400	✓	✓ ^{a2}	✓				✓	✓	✓	✓
PuraVida 240 	# 15072000	✓	✓ ^{a2}					✓	✓		
	# 15072400	✓	✓ ^{a2}					✓	✓		
PuraVida 240 	# 15066000	✓	✓ ^{a2}					✓	✓		
	# 15066400	✓	✓ ^{a2}					✓	✓		
PuraVida 165mm 	# 15084000		✓ ^{c1} d2				✓ ^{c1}				
	# 15084400		✓ ^{c1} d2				✓ ^{c1}				
PuraVida 225mm 	# 15085000		✓ ^{c1} d2								
	# 15085400		✓ ^{c1} d2								

Legend:

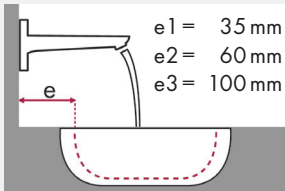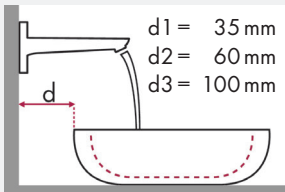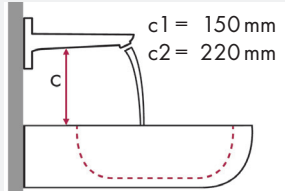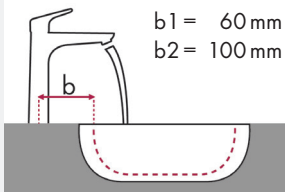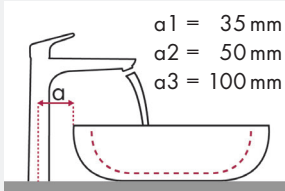






- ✓ = Recommended combination
- = Taphole pushed through
- = Prepared taphole
- ⊗ = Without taphole

hangrohe Metris Classic and Roca washbasin



		Java 560 x 475	Selene 510 x 395	Meridian 850 x 460	Diverta 470 x 440	Diverta 750 x 440	Ibis 440 x 310	Victoria 560 x 460	Victoria 650 x 510	The Gap 600 x 470	The Gap 650 x 470
		●	⊗	●	●	●	○	●	●	●	●
		# 7327863000	# 7322307000	# 32724D0000	# 73271110	# 3271100000	# 3208410010	# 3253930000	# 3253910000	# 3274740000	# 3274730000
article no.	article no.										
Metris Classic 100 	# 31075000	✓		✓	✓	✓	✓	✓	✓	✓	✓
	# 31077000	✓		✓	✓	✓	✓	✓	✓	✓	✓
Metris Classic 250 	# 31078000	✓	✓ ^{a2}					✓	✓		
Metris Classic 165mm 	# 31000000						✓ ^{c1}				

Legend:

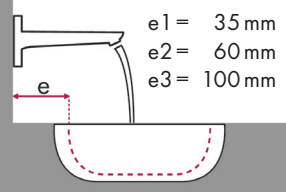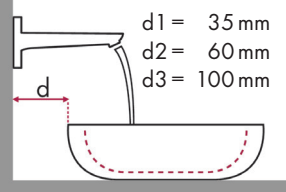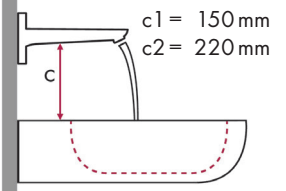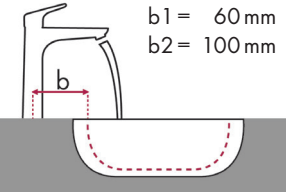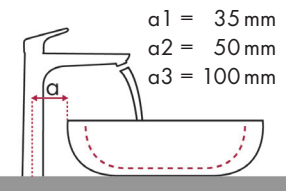






- ✓ = Recommended combination
- = Taphole pushed through
- = Prepared taphole
- ⊗ = Without taphole

hansgrohe Talis Classic and Roca washbasin



		Java 560 x 475	Selene 510 x 395	Diverta 470 x 440	Diverta 750 x 440	Ibis 440 x 310	Victoria 560 x 460	Victoria 650 x 510
		●	⊗	●	●	○	●	●
		# 7327863000	# 7322307000	# 73271110	# 327110000	# 320841001	# 325393000	# 325391000
article no.								
Talis Classic 80 	# 14111000	✓		✓	✓	✓	✓	✓
	# 14118000	✓		✓	✓	✓	✓	✓
Talis Classic 90 	# 14127000	✓	✓ ^{a2}			✓	✓	✓
Talis Classic 230 	# 14116000	✓	✓ ^{a2}				✓	✓

Legend:

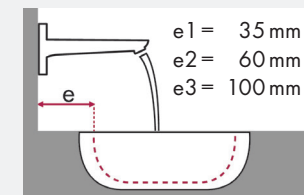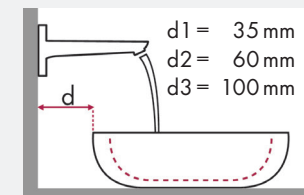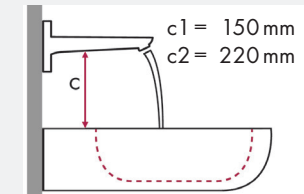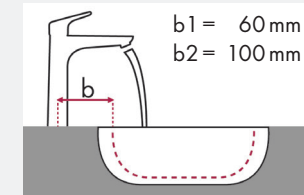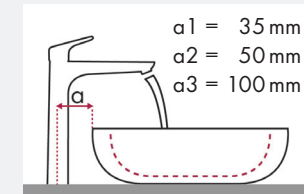

- ✓ = Recommended combination
- = Taphole pushed through
- = Prepared taphole
- ⊗ = Without taphole