
AXOR COMFORTZONE TEST

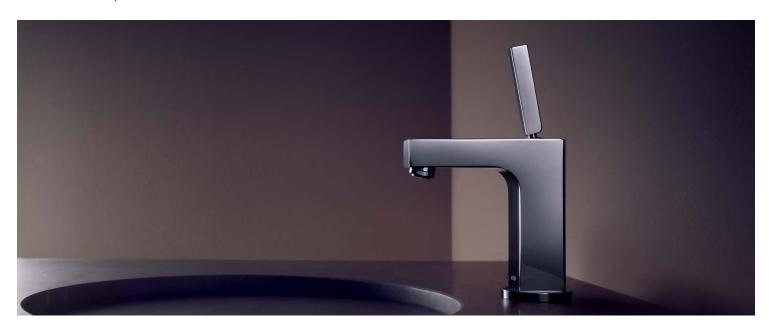

Stylish planning with confidence: use the AXOR ComfortZone test to find the right wash basin for your Axor Citterio mixer – and vice versa.



The ideal mixer/wash basin combination: perfectly matched aesthetically, and technologically tested. This prevents any annoying splashing and staining around the wash basin area.




AXOR tested all the AXOR Citterio basin mixers with the leading manufacturers' most popular washbasins in the ComfortZone test, its specially developed realistic test procedure. The space under the mixer and the splash behaviour are tested in this performance test of mixer and basin. Detailed information on the ComfortZone test can be found at:


pro.hansgrohe-int.com/axor-washbasin-matrix

CERAMIC TYPES


Always find the matching Axor Citterio mixer to go with the familiar basin types. The AXOR ComfortZone test is a comprehensive guidance document for the perfect installation of the mixer and washbasin for pleasant, splash-free washing. Five different ceramic types were tested in the AXOR ComfortZone test:




Washbasin with the mixer behind it




mixer behind it Washbasin with the mixer on top of it



Washbasin with the mixer on the wall




Undermount or topmounted basin with free standing mixer



Wall-mounted washbasin with the mixer on it

You can use the results of the ComfortZone test free now at: pro.hansgrohe-int.com/axor-washbasin-matrix



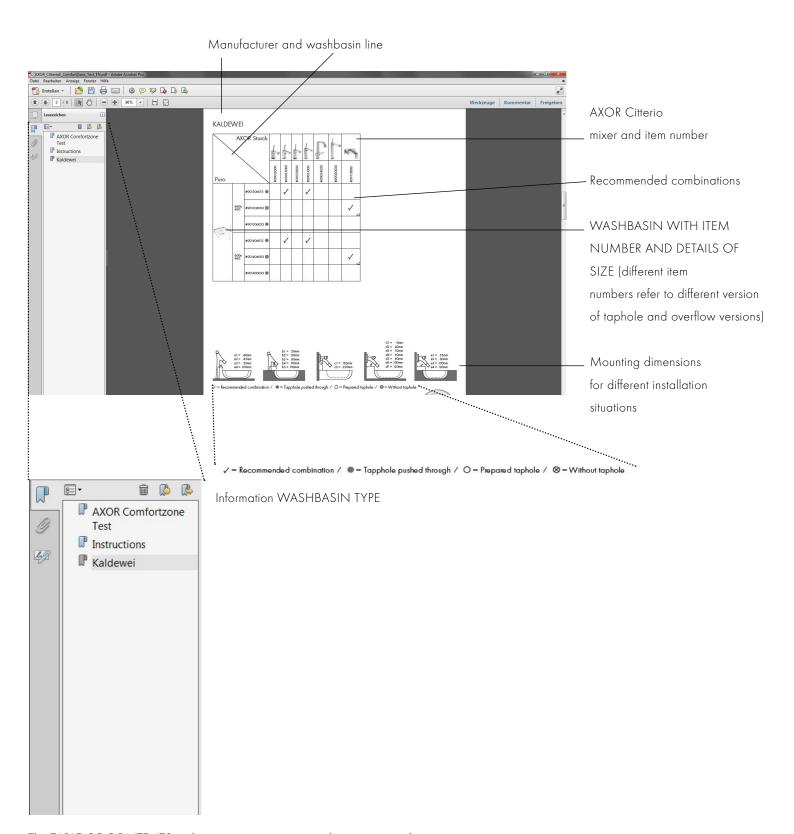



The TABLE OF CONTENTS makes it easy to get to your chosen ceramic line.





KALDEWEI


AXOR Starck									
Puro			#39015000	#39035000	#39010000	#39031000	#39034000	#39020000	#39115000
	460x 460	#901306013		✓		✓			
		#901306003 ⊗							√
		#901306033							
	600x 460	#901406013		✓		✓			
		#901406003 ⊗							√ c2
		#901406033							







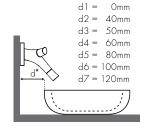




 \checkmark = Recommended combination / \bullet = Tapphole pushed through / \bigcirc = Prepared taphole / \otimes = Without taphole








KALDEWEI


	OR Starck						1		
					F		R.C.		
Puro	Puro			#39035000	#39010000	#39031000	#39034000	#39020000	#39115000
		#901506013		✓		✓			
	900x 460	#901506003 🛇							√ c2
		#901506033							
	1300x 460	#906706043		√		√			
		#906706003 🛇							√ c2
		#906706053							
	550x 300	#04916000 • #04916027 •	√	√		√			
		#901506003 ⊗ #901506003 ⊗				√			
	550x	#901506033	✓	√		√			
	550x 300	#901506003 🛇				√			







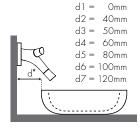




 \checkmark = Recommended combination / \bullet = Tapphole pushed through / \bigcirc = Prepared taphole / \bigotimes = Without taphole








KALDEWEI


	Λ V (OP Starck							
AXOR Starck									
Puro			#39015000	#39035000	#39010000	#39031000	#39034000	#39020000	#39115000
	#900606013			✓		✓			
	460x 460	#900606003 🛇							√ c2
		#901506033							
	600x 460	#900706013		✓		✓			
		#90070600 🛇							√ c2
		#900706030							
	900x 460	#900806013		✓		✓			
		#900806003 🛇							✓ c2
		#900806033							







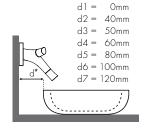




 \checkmark = Recommended combination / \bullet = Tapphole pushed through / \bigcirc = Prepared taphole / \bigotimes = Without taphole








KALDEWEI


	AXOR Starck							1	
						3	P S		
Puro			#39015000	#39035000	#39010000	#39031000	#39034000	#39020000	#39115000
		#907206043		✓		✓			
	1300x 460	#907206003 🛇							√ c2
		#907206053							
	460x 460	#900306013		✓		√			
		#900306003 🛇							✓ c2
•		#900306033							
		#900406013		✓		✓			
		#900406003 🛇							✓ c2
		#900406033							







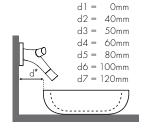




 \checkmark = Recommended combination / \bullet = Tapphole pushed through / \bigcirc = Prepared taphole / \bigotimes = Without taphole








KALDEWEI


	AXOR Starck							1	
						3	P S		
Puro			#39015000	#39035000	#39010000	#39031000	#39034000	#39020000	#39115000
	#900506013			✓		√			
	900x 460	#900506003 🛇							√ c2
		#900506033							
	460x 460	#900006013		✓		\			
		#900006003 🛇							✓ c2
		#900006033							
		#900106013		✓		✓			
		#900106003 🛇							✓ c2
		#900106033							







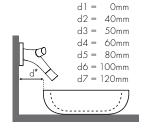




 \checkmark = Recommended combination / \bullet = Tapphole pushed through / \bigcirc = Prepared taphole / \otimes = Without taphole








KALDEWEI


							No		
Puro			#39015000	#39035000	#39010000	#39031000	#39034000	#39020000	#39115000
	900x 460	#900206013		✓		✓			
		#900206003⊗							√
		#900206033							
	460x 460 #900906003			√		√ b1		√	•2 c2
	600x 460	#901006003 🛇		√		√ b1		√	e2
	900x 460	#901106003		√ b0		✓ b1		√ b0	√ e2 c2







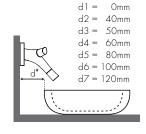



 \checkmark = Recommended combination / \bullet = Tapphole pushed through / \bigcirc = Prepared taphole / \otimes = Without taphole

