


Nach der Montage alle Muttern fest anziehen!  
After mounting tighten all nuts firmly!  
安装完成后拧紧所有组件!

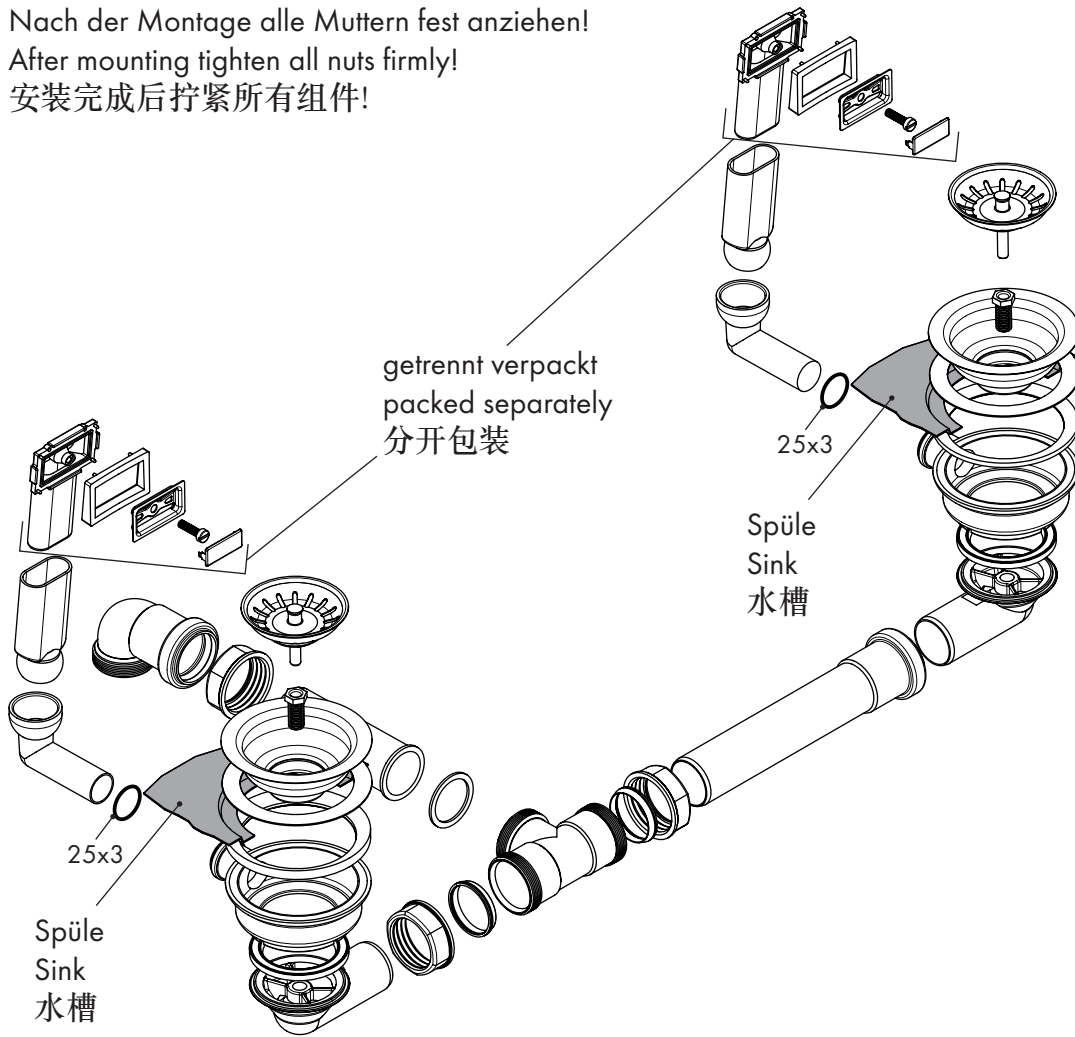


**hansgrohe**  
**Drain / 下水**  
**1 x 4392200X**  
manual for sink 370 x 370  
手动下水 370 x 370

Nach der Montage alle Muttern fest  
anziehen!

After mounting tighten all nuts firmly!

安装完成后拧紧所有组件!

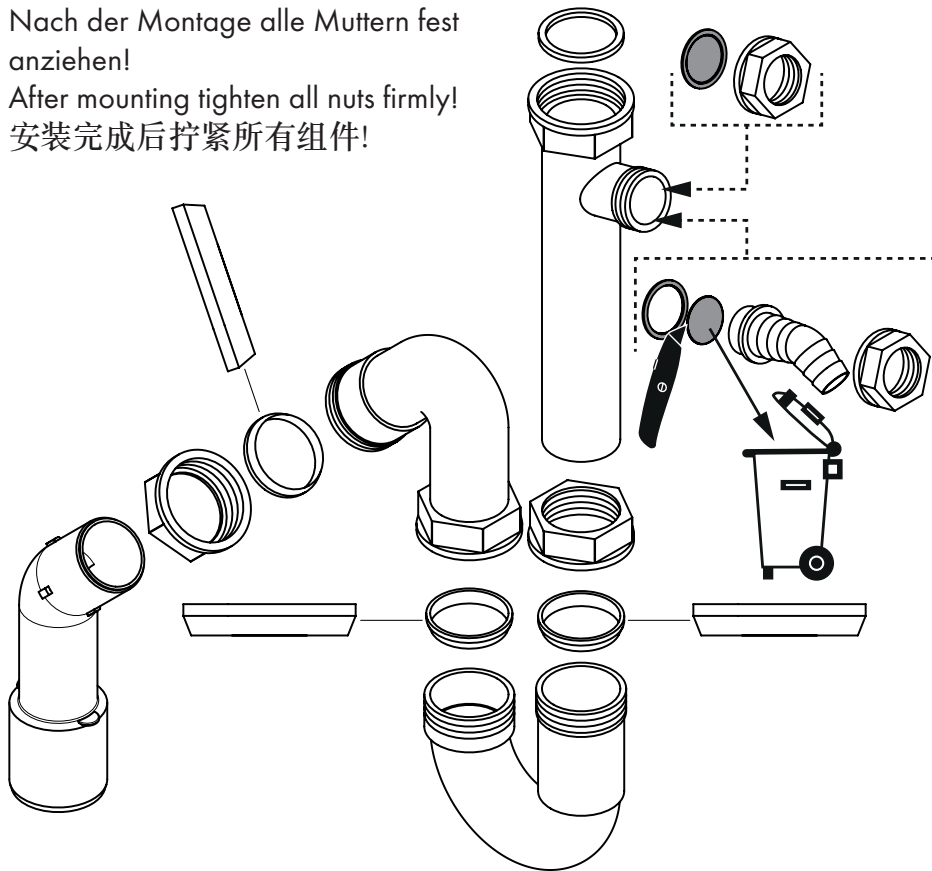

**hansgrohe**

**Quality Certificate**

**质量合格证**

Worker No.

工号

Production date

生产日期

According to QB/T4013-2010

符合标准QB/T4013-2010

**QC  
PASSED**