


EN Instructions for use / assembly instructions


2

DE Gebrauchsanleitung / Montageanleitung


3

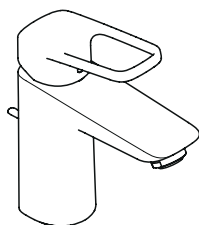


Logis Loop 100
71187009

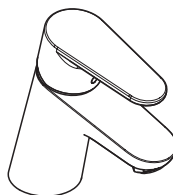


Focus 70
31992009 / 31993009

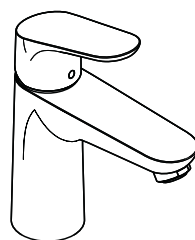


Focus 100
31977009 / 31978009
31541009

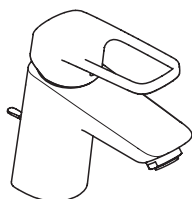


Logis Loop 70
71188009

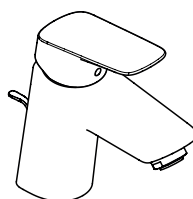


Logis 70
71001009 / 71002009
71094009 / 71291009
71292009

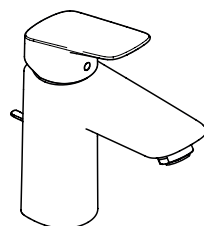


Logis 100
71293009 / 71294009
71295009 / 71296009
71297009 / 71298009

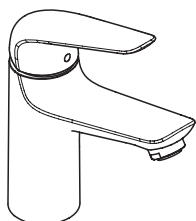

Novus 100
71027009

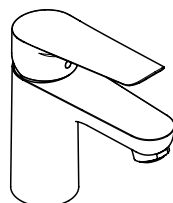

Logis E 70
71008009 / 71009009

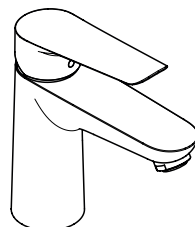

Logis E 100
71005009 / 71006009



Safety Notes

- ⚠ Gloves should be worn during installation to prevent crushing and cutting injuries.
- ⚠ The product may only be used for bathing, hygienic and body cleaning purposes.
- ⚠ The hot and cold supplies must be of equal pressures.

Installation Instructions

- Prior to installation, inspect the product for transport damages. After it has been installed, no transport or surface damage will be honoured.
- The pipes and the fixture must be installed, flushed and tested as per the applicable standards.
- The plumbing codes applicable in the respective countries must be observed.
- The drain valve must only be used as intended. It is not allowed to attach other objects to the drain valve, for example a semi-pedestal.

Technical Data

Operating pressure:	max. 1 MPa
Recommended operating pressure:	0,1 - 0,5 MPa
Test pressure:	1,6 MPa
	(1 MPa = 10 bar = 147 PSI)

Hot water temperature:	max. 60°C
Thermal disinfection:	70°C / 4 min

The product is exclusively designed for drinking water!

Symbol description



Do not use silicone containing acetic acid!



Adjustment (see page 7)

To adjust the hot water limiter. Using a hot water limiter in combination with a continuous flow water heater is not recommended.



Dimensions (see page 8)



Flow diagram (see page 11)



Spare parts (see page 13)

Special accessories (order as an extra)



- special tool #58085000 (see page 5)



- Installation putty (see page 5)



- seal #98996000 (see page 4)



Cleaning (see page 16)



Operation (see page 12)

- Hansgrohe recommends not to use as drinking water the first half liter of water drawn in the morning or after a prolonged period of non-use.





Sicherheitshinweise

- ⚠ Bei der Montage müssen zur Vermeidung von Quetsch- und Schnittverletzungen Handschuhe getragen werden.
- ⚠ Das Produkt darf nur zu Bade-, Hygiene- und Körperreinigungszwecken eingesetzt werden.
- ⚠ Große Druckunterschiede zwischen den Kalt- und Warmwasseranschlüssen müssen ausgeglichen werden.

Montagehinweise

- Vor der Montage muss das Produkt auf Transportschäden untersucht werden. Nach dem Einbau werden keine Transport- oder Oberflächenschäden anerkannt.
- Die Leitungen und die Armatur müssen nach den gültigen Normen montiert, gespült und geprüft werden.
- Die in den Ländern jeweils gültigen Installationsrichtlinien sind einzuhalten.
- Das Ablaufventil darf nur zum bestimmungsgemäßen Gebrauch verwendet werden. Das Befestigen von anderen Gegenständen z. B. einer Halbsäule an dem Ablaufventil ist nicht zulässig.

Technische Daten

Betriebsdruck:	max. 1 MPa
Empfohlener Betriebsdruck:	0,1 - 0,5 MPa
Prüfdruck:	1,6 MPa
	(1 MPa = 10 bar = 147 PSI)
Heißwassertemperatur:	max. 60 °C
Thermische Desinfektion:	70 °C / 4 min

Das Produkt ist ausschließlich für Trinkwasser konzipiert!

Symbolerklärung



Kein essigsäurehaltiges Silikon verwenden!



Justierung (siehe Seite 7)

Einstellen der Warmwasserbegrenzung. In Verbindung mit Durchlauferhitzern ist eine Warmwassersperre nicht zu empfehlen.



Maße (siehe Seite 8)



Durchflussdiagramm

(siehe Seite 11)



Serviceteile (siehe Seite 13)

Sonderzubehör

(nicht im Lieferumfang enthalten)



- Montageschlüssel
#58085000 (siehe Seite 5)



- Installationskitt (siehe Seite 5)



- Dichtung #98996000 (siehe Seite 4)















Reinigung (siehe Seite 16)














Bedienung (siehe Seite 12)

- Hansgrohe empfiehlt, morgens oder nach längeren Stagnationszeiten den ersten halben Liter nicht als Trinkwasser zu verwenden.

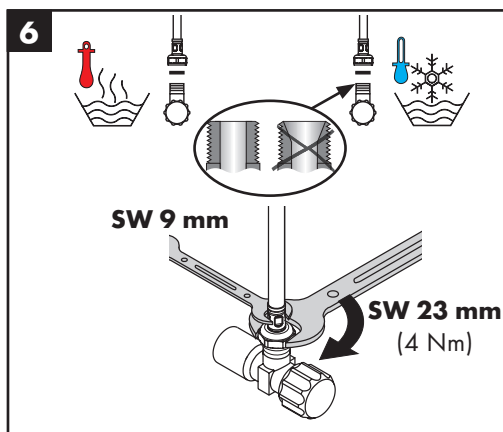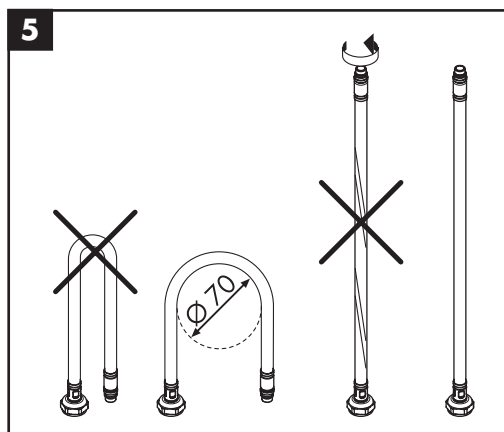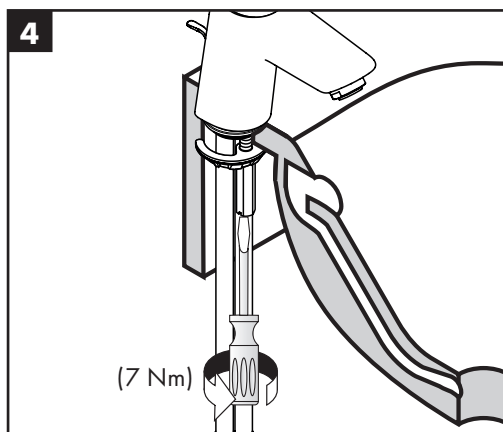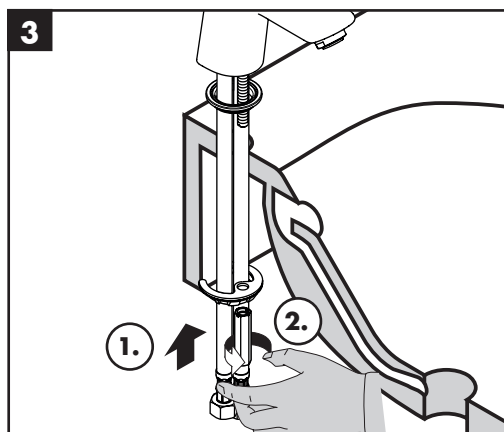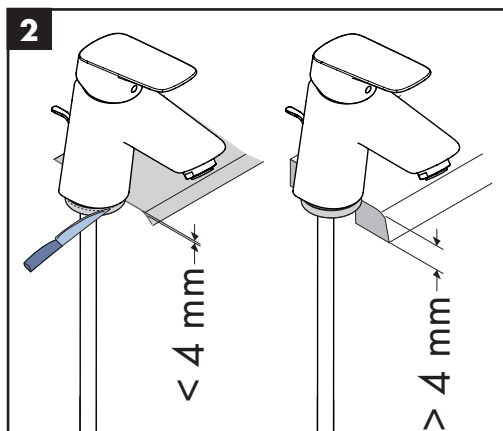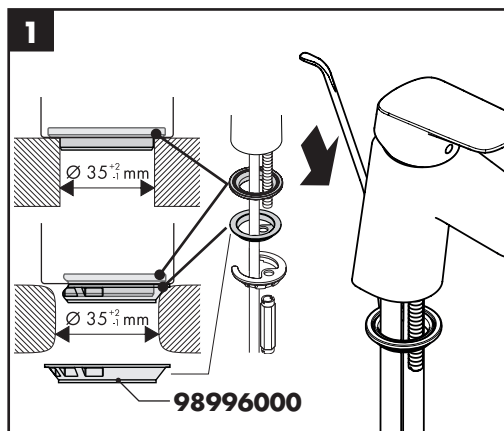

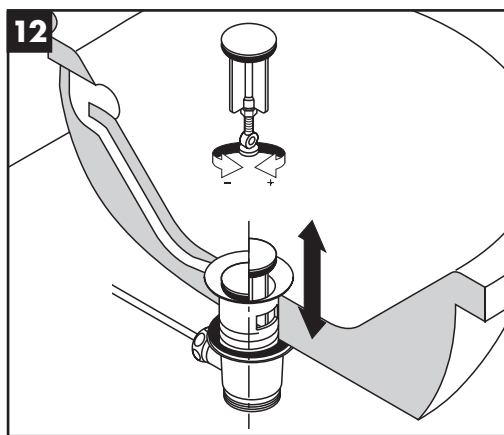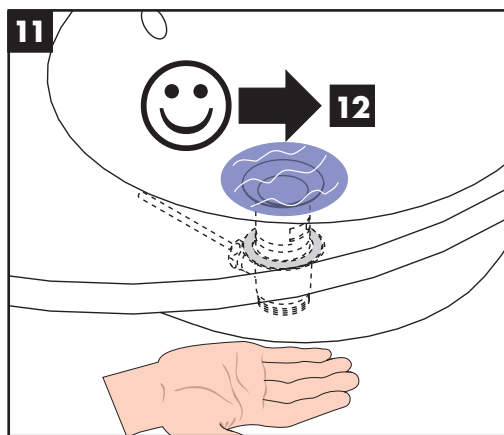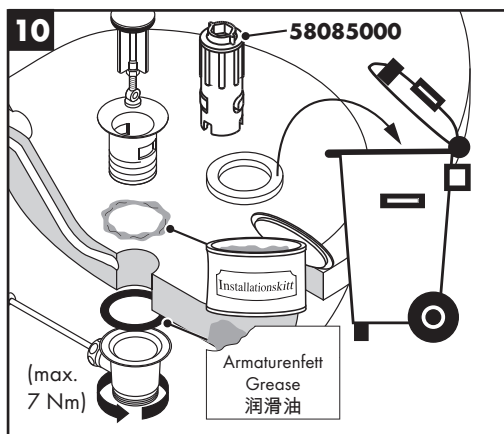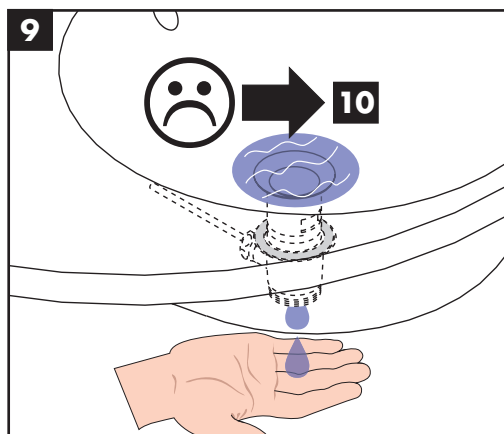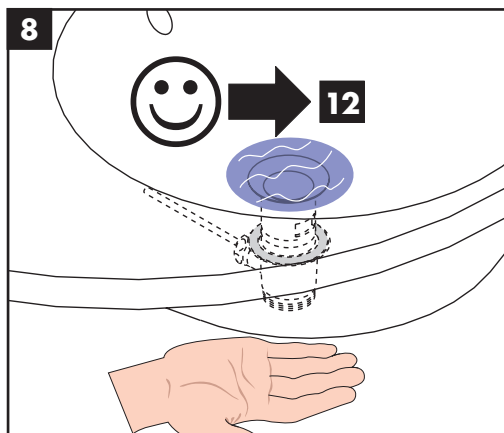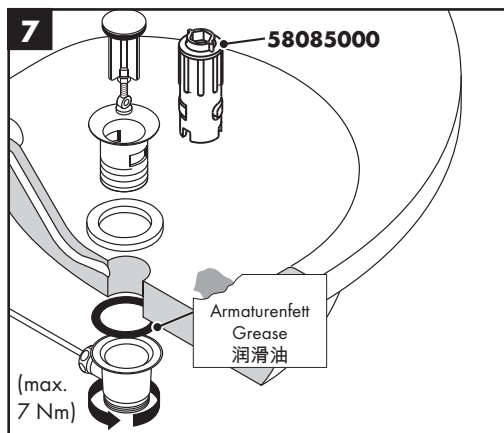

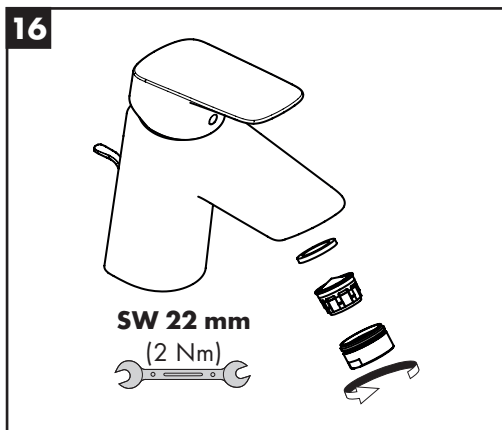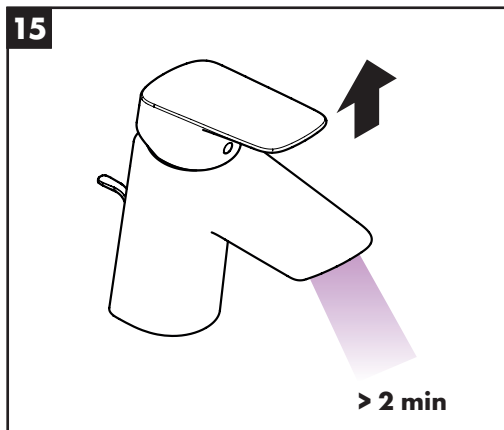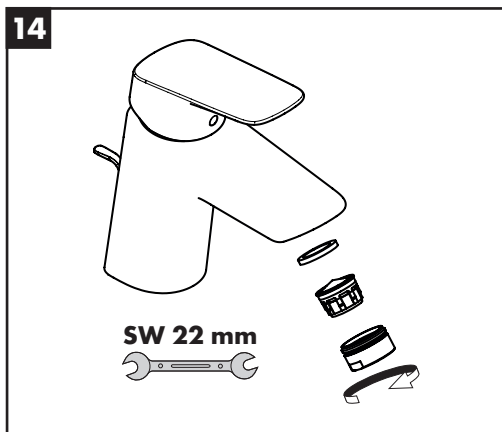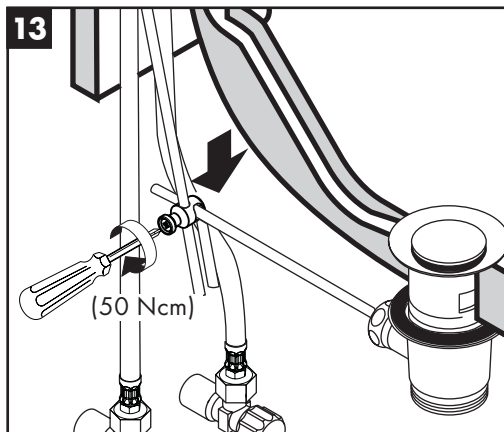


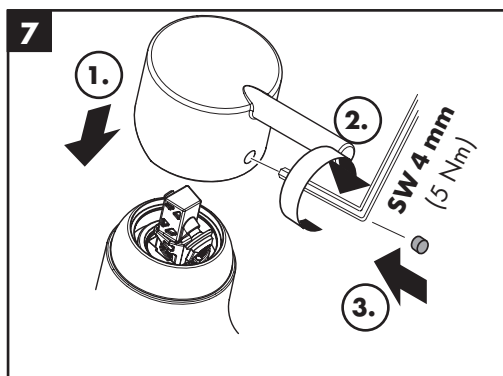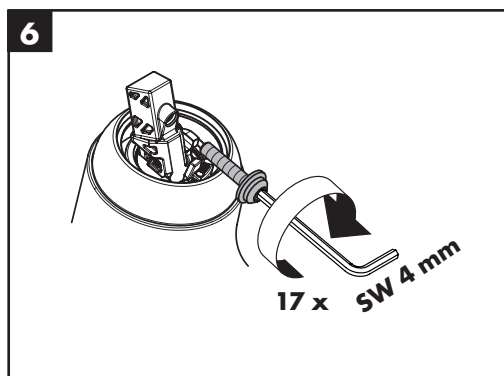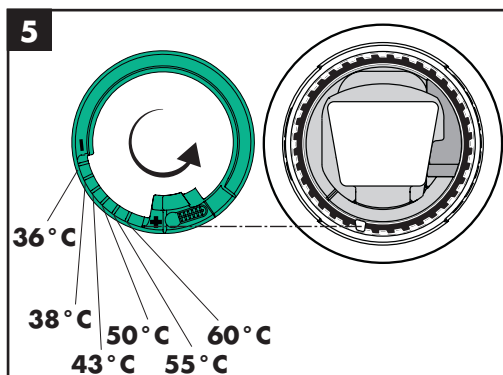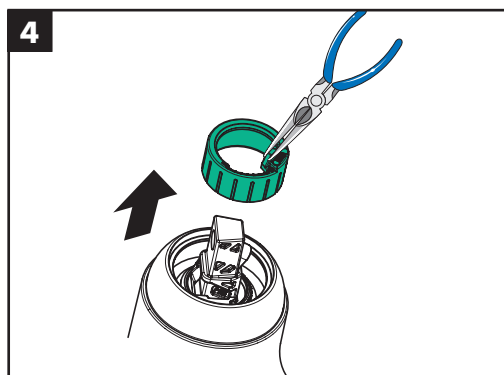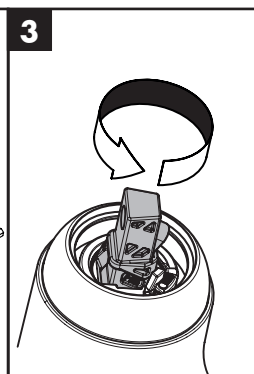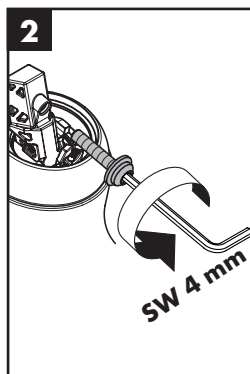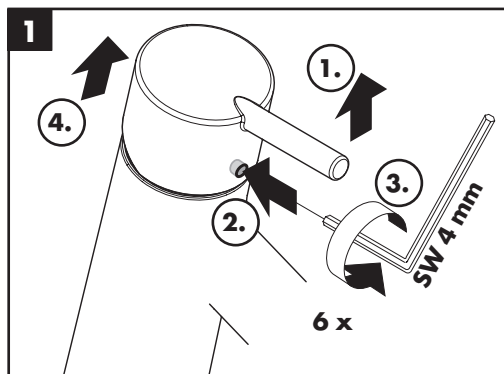




Focus 70

31992009 / 31993009

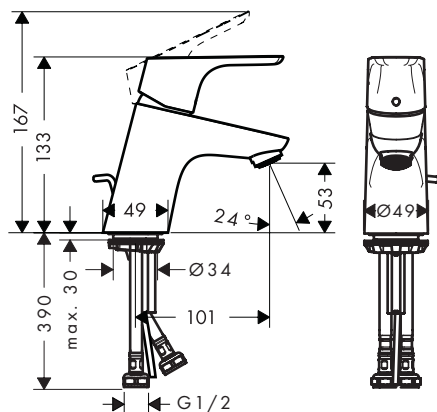


Focus 100

31541009 / 31977009 / 31978009

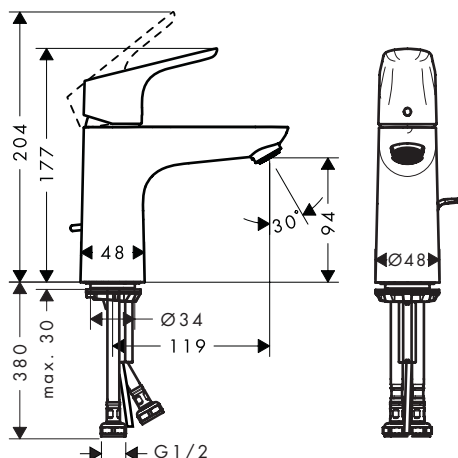


Logis E 70

71008009 / 71009009

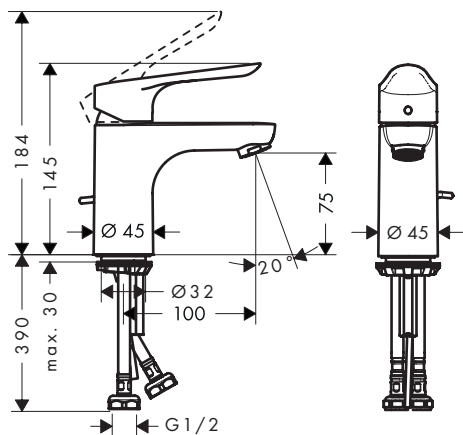


Logis E 100

71005009 / 71006009

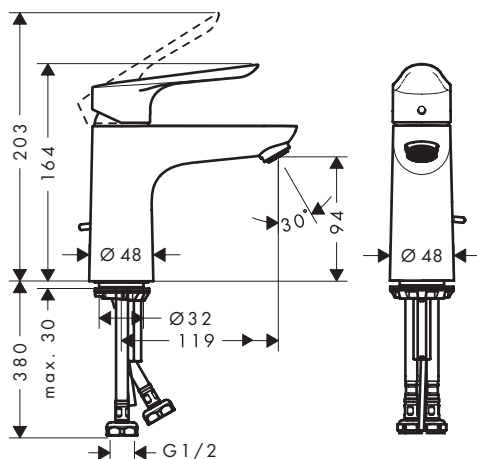


Logis 70

71001009 / 71002009 / 71094009 /
71291009 / 71292009

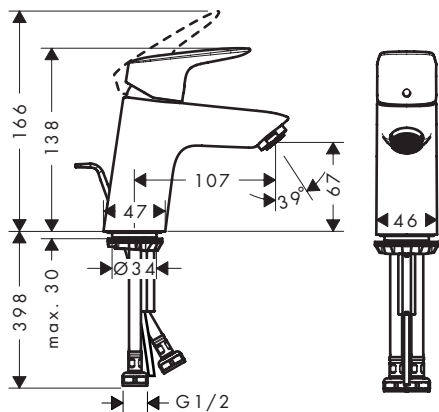


Logis 100

71293009 / 71294009 / 71295009 /
71296009 / 71297009 / 71298009

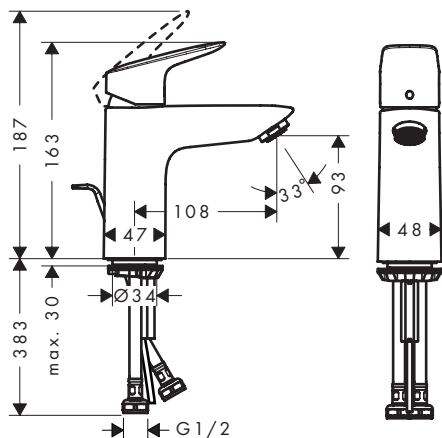


Logis Loop 70

71188009

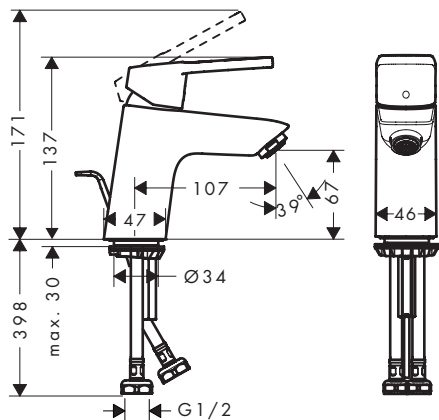

Logis Loop 100


71187009

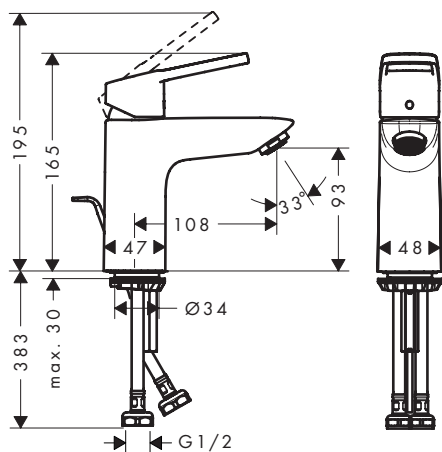




Novus 100


71027009

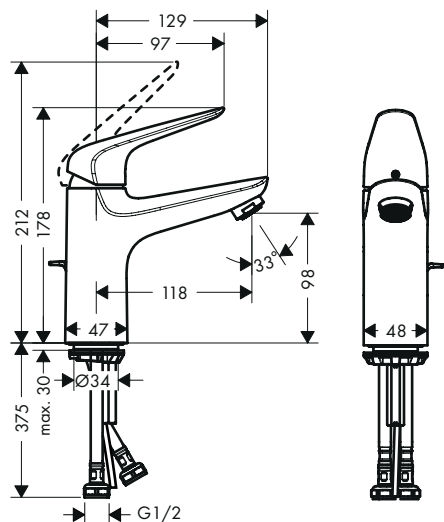


94139000

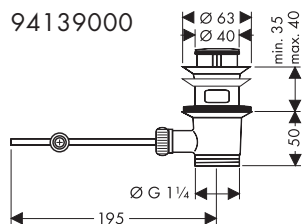


94139007

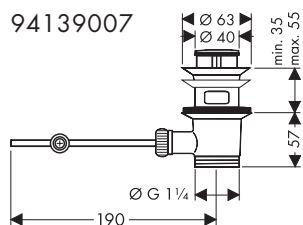

92168007

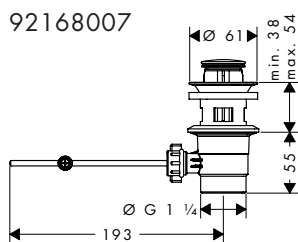

50105000

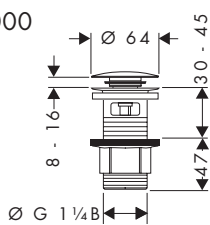



Focus 70

31992009

Logis E 70

71008009

Logis 70

71001009 / 71094009

71291009

Logis Loop 70

71188009

Novus 100

71027009

Focus 100

31541009 / 31977009

Logis E 100

71005009


Logis 100

71293009 / 71295009

71297009

Logis Loop 100

71187009

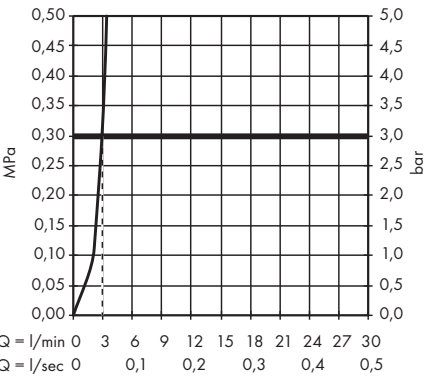

Focus 70

31993009

Logis E 70

71009009

Logis 70

71002009 / 71292009

Focus 100

31978009


Logis E 100


71006009

Logis 100


71294009 / 71296009

71298009

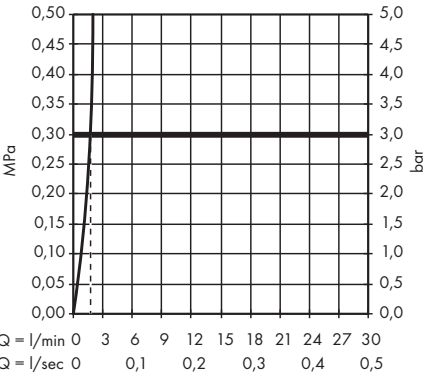


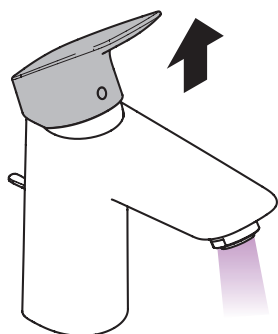


open / öffnen

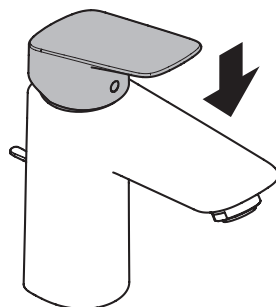

close / schließen

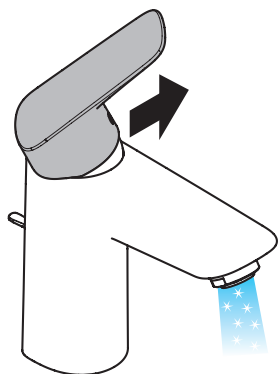

cold / kalt

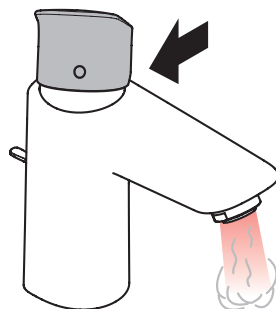

hot / warm




Focus 70

31992009 / 31993009


Focus 100

31541009 / 31977009 / 31978009

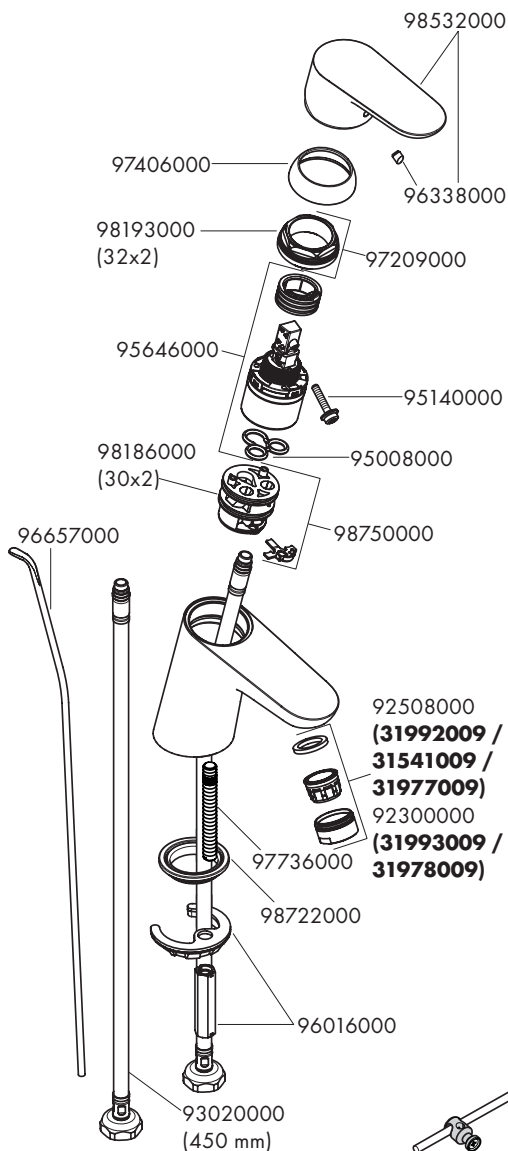

Novus 100

71027009

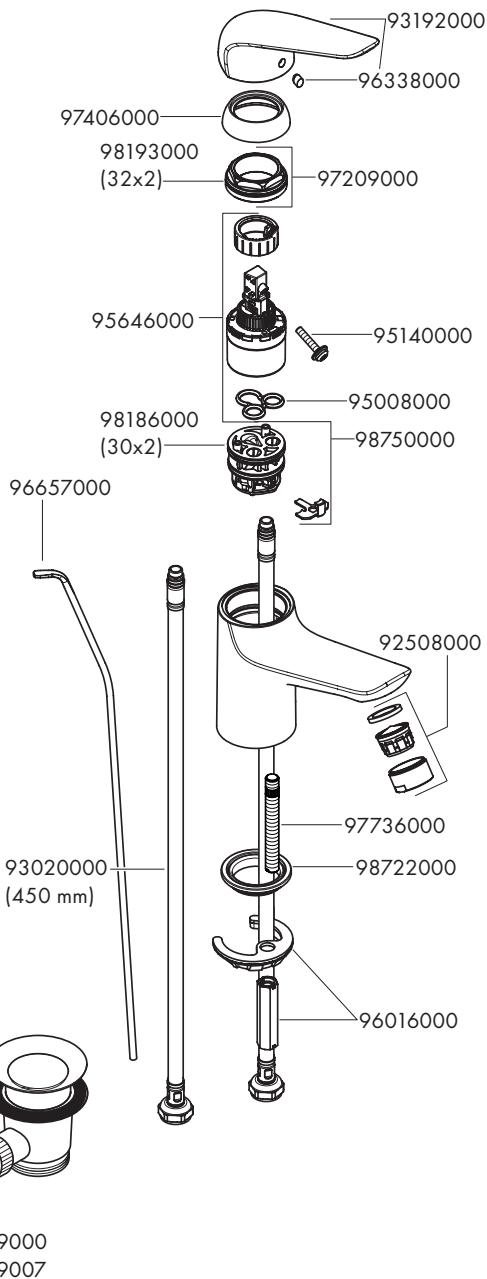



Logis 70

71001009 / 71002009 /
71094009 / 71291009 /
71292009

Logis 100


71293009 / 71294009 /
71295009 / 71296009 /
71297009 / 71298009

Logis Loop 70


71188009

Logis Loop 100


71187009



50105000

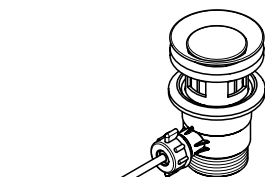

92168007


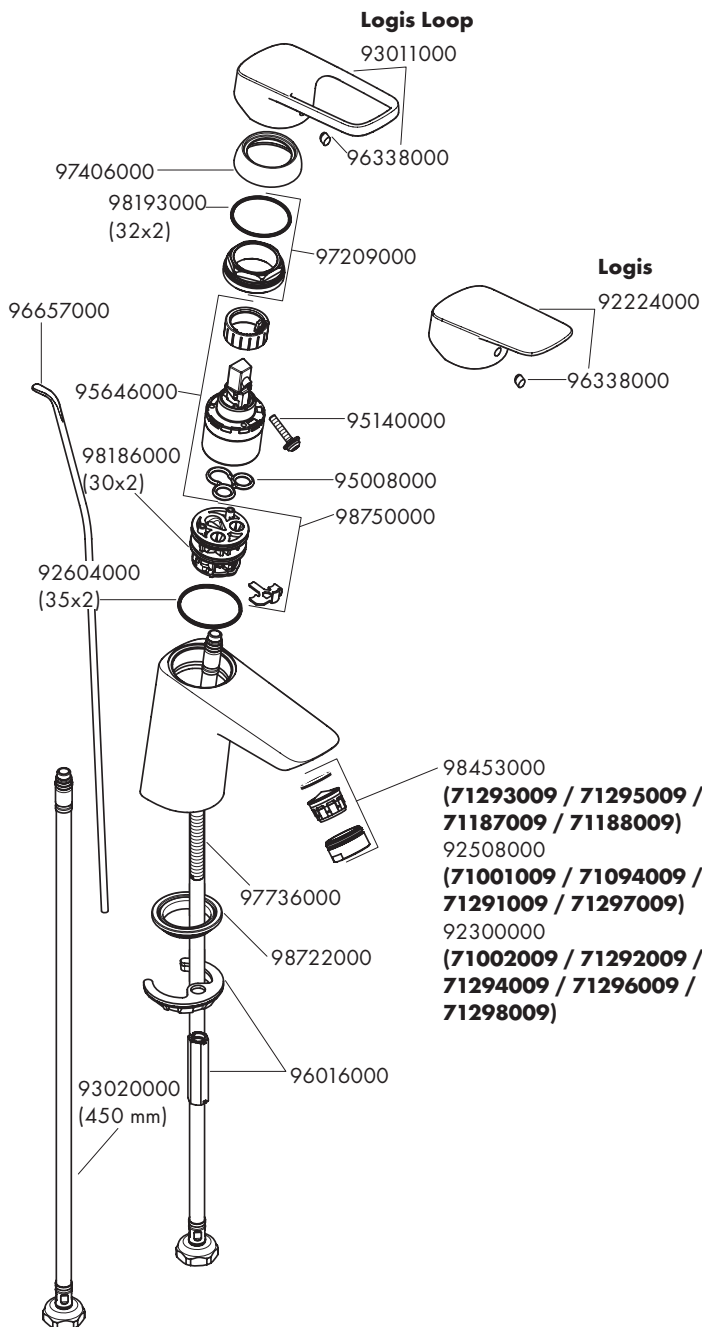


Logis E 70

71008009 / 71009009


Logis E 100

71005009 / 71006009

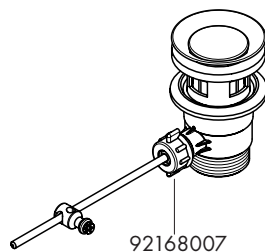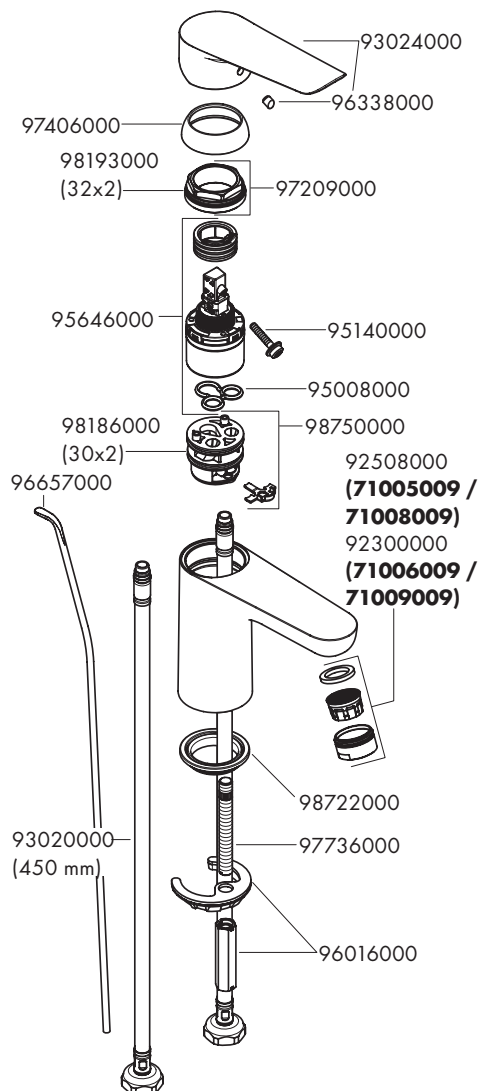



[www.hansgrohe.com/
cleaning-recommendation](http://www.hansgrohe.com/cleaning-recommendation)

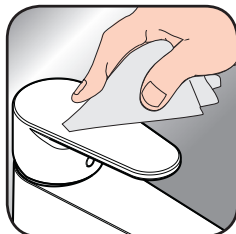

[www.hansgrohe.com/
cleaning-recommendation](http://www.hansgrohe.com/cleaning-recommendation)



[www.hansgrohe.com/
cleaning-recommendation](http://www.hansgrohe.com/cleaning-recommendation)



[www.hansgrohe.com/
cleaning-recommendation](http://www.hansgrohe.com/cleaning-recommendation)

EN Cleaning recommendation / Warranty / Contact

DE Reinigungsempfehlung / Garantie / Kontakt